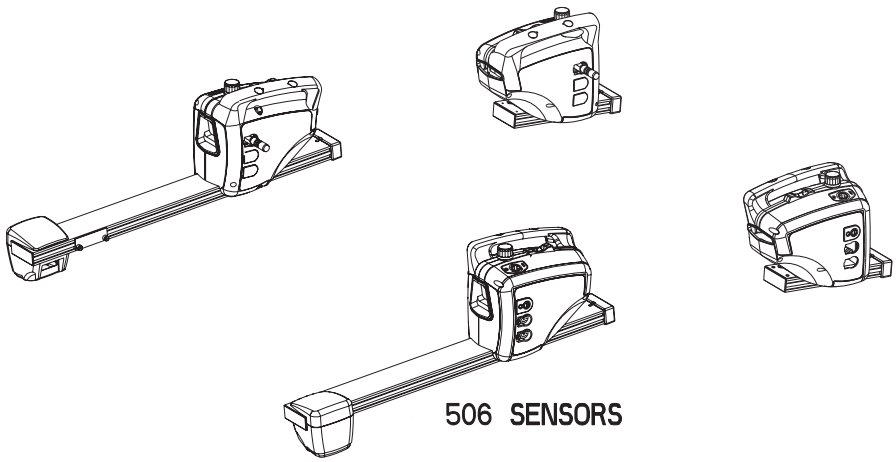

506 SENSORS

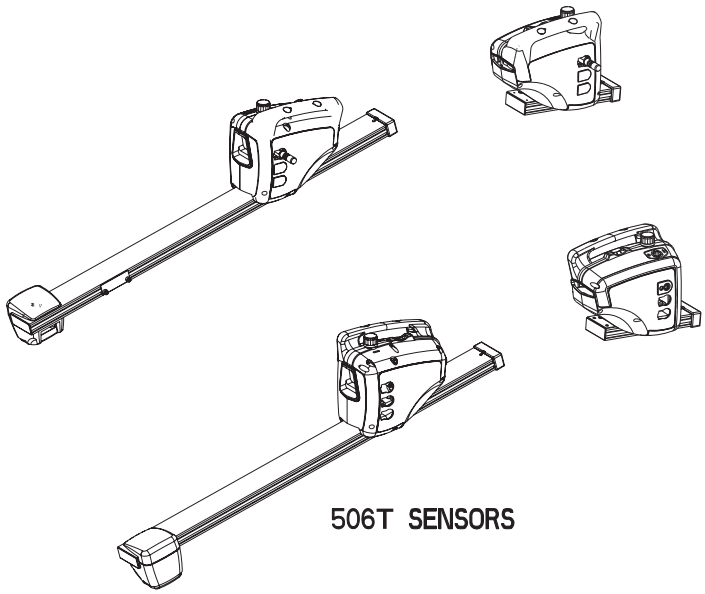

506T SENSORS

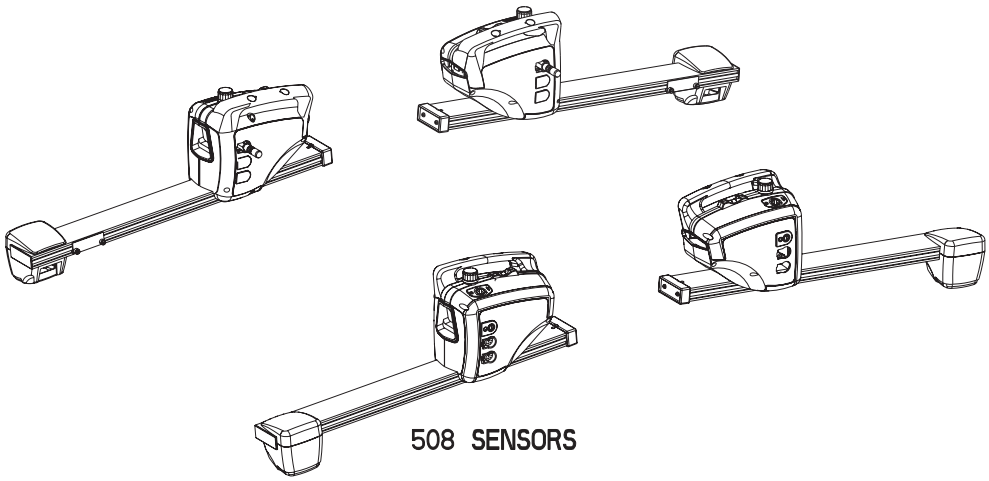

508 SENSORS

DSP506/506T/508 SENSOR ASSEMBLY

©2003-2008 Hunter Enginnering Company

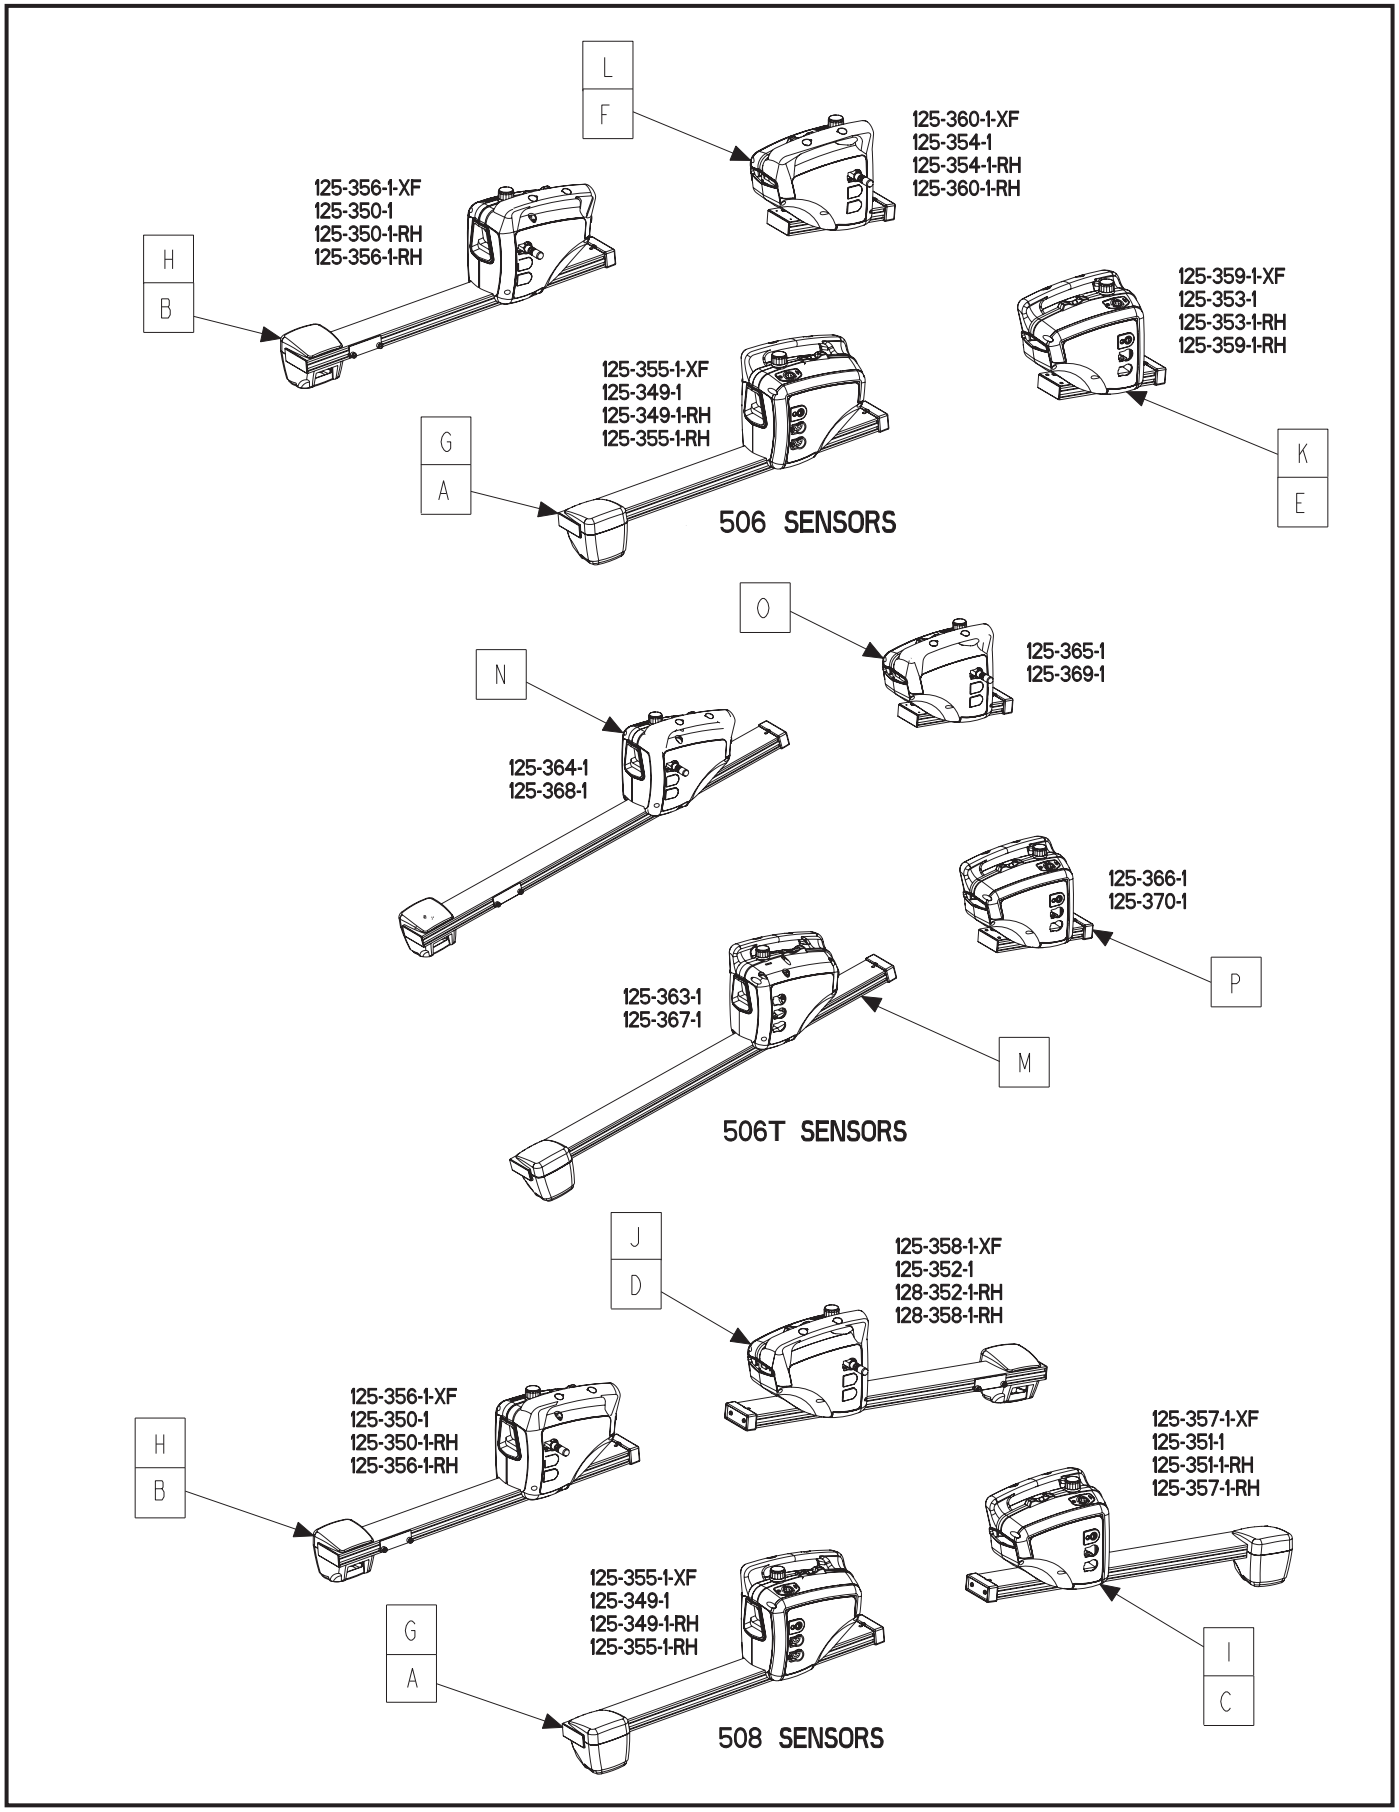

DSP506/506T/508 SENSOR ASSEMBLY

REFER TO NEXT SHEET FOR PARTS DESCRIPTION LISTING

Index No.	Part Number	Description
A	125-349-1	SENSOR ASSEMBLY, DSP506/508 LEFT FRONT (See Sheet 3,5,10)
	125-349-1-RH	SENSOR ASSEMBLY, DSP506/508 LEFT FRONT RIDE HEIGHT (See Sheet 3,5,10,12)
B	125-350-1	SENSOR ASSEMBLY, DSP506/508 RIGHT FRONT (See Sheet 3,5,10)
	125-350-1-RH	SENSOR ASSEMBLY, DSP506/508 RIGHT FRONT RIDE HEIGHT (See Sheet 3,5,10,12)
C	125-351-1	SENSOR ASSEMBLY, DSP508 LEFT REAR (See Sheet 3,5,10)
	125-351-1-RH	SENSOR ASSEMBLY, DSP508 LEFT REAR RIDE HEIGHT (See Sheet 3,5,10,12)
D	125-352-1	SENSOR ASSEMBLY, DSP508 RIGHT REAR (See Sheet 3,5,10)
	125-352-1-RH	SENSOR ASSEMBLY, DSP508 RIGHT REAR RIDE HEIGHT (See Sheet 3,5,10,12)
E	125-353-1	SENSOR ASSEMBLY, DSP506 LEFT REAR (See Sheet 4,7,10)
	125-353-1-RH	SENSOR ASSEMBLY, DSP506 LEFT REAR RIDE HEIGHT (See Sheet 4,7,9,11)
F	125-354-1	SENSOR ASSEMBLY, DSP506 RIGHT REAR (See Sheet 4,7,10)
	125-354-1-RH	SENSOR ASSEMBLY, DSP508 RIGHT REAR RIDE HEIGHT (See Sheet 4,7,10,12)
G	125-355-1	SENSOR ASSEMBLY, DSP506/508 XF LEFT FRONT (See Sheet 3,6,10,11)
	125-355-1-RH	SENSOR ASSEMBLY, DSP506/508 XF LEFT REAR RIDE HEIGHT (See Sheet 3,6,10,11,12)
H	125-356-1	SENSOR ASSEMBLY, DSP506/508 XF RIGHT FRONT (See Sheet 3,6,10,11)
	125-356-1-RH	SENSOR ASSEMBLY, DSP506/508 XF RIGHT FRONT RIDE HEIGHT (See Sheet 3,5,6,10)
I	125-357-1	SENSOR ASSEMBLY, DSP508 XF LEFT REAR (See Sheet 3,5,6,10)
	125-357-1-RH	SENSOR ASSEMBLY, DSP506/508 XF RIGHT REAR RIDE HEIGHT (See Sheet 3,6,10,11,12)
J	125-358-1	SENSOR ASSEMBLY, DSP508 XF RIGHT REAR (See Sheet 3,6,10,11)
	125-358-1-RH	SENSOR ASSEMBLY, DSP508 XF RIGHT REAR RIDE HEIGHT (See Sheet 3,6,10,11,12)
K	125-359-1	SENSOR ASSEMBLY, DSP506 XF LEFT REAR (See Sheet 4,8,10,11)
	125-359-1-RH	SENSOR ASSEMBLY, DSP506 XF LEFT REAR RIDE HEIGHT (See Sheet 4,8,10,11,12)
L	125-360-1	SENSOR ASSEMBLY, DSP506 XF RIGHT REAR (See Sheet 4,8,10,11)
	125-360-1-RH	SENSOR ASSEMBLY, DSP506 XF RIGHT REAR RIDE HEIGHT (See Sheet 4,8,10,11,12)
M	125-363-1	SENSOR ASSEMBLY, DSP506T LEFT FRONT (See Sheet 3,6)
	125-367-1	SENSOR ASSEMBLY, DSP506T XF LEFT FRONT (See Sheet 3,6,10,11)
N	125-364-1	SENSOR ASSEMBLY, DSP506T RIGHT FRONT (See Sheet 3,6)
	125-368-1	SENSOR ASSEMBLY, DSP506T XF RIGHT FRONT (See Sheet 3,6,10,11)
O	125-365-1	SENSOR ASSEMBLY, DSP506T LEFT REAR (See Sheet 4,7,8)
	125-369-1	SENSOR ASSEMBLY, DSP506T XF LEFT REAR (See Sheet 4,7,8,10,11)
P	125-366-1	SENSOR ASSEMBLY, DSP506T RIGHT REAR (See Sheet 4,7,8)
	125-370-1	SENSOR ASSEMBLY, DSP506T XF RIGHT REAR (See Sheet 4,7,8,10,11)
Q	38-784-3	CABLE ASSEMBLY, SHIELDED SENSOR (Not Illustrated)
R	38-512-1	CABLE ASSEMBLY, 10 EXTENSION (Not Illustrated)
S	117-178-1	SENSOR HANGER, DSP500 RIGHT FRONT/LEFT REAR (Not Illustrated)
T	117-179-1	SENSOR HANGER, DSP500 LEFT FRONT/RIGHT REAR (Not Illustrated)
U	117-180-1	SENSOR HANGER, DSP500 RIGHT FRONT/LEFT REAR W/ CHARGING (Not Illustrated)
V	117-181-1	SENSOR HANGER, DSP500 LEFT FRONT/RIGHT REAR W/ CHARGING (Not Illustrated)
W	232-157-1	ELECTRONIC ASSEMBLY, 2.4 GHZ (XF SENSORS ONLY) (Not Illustrated) (See Sheet 11)
X	221-527-1	KIT, TRUCK MEASURING TOOL (Not Illustrated)
Y	221-669-1	KIT, TOOL RIDE HEIGHT, DSP500 (Not Illustrated) (See Sheet 12)
Z	20-1765-1	KIT, SENSOR HANGER DSP500 (Not Illustrated)
Z1	20-1954-1	KIT, SENSOR HANGER ADAPTORS DSP506T (Not Illustrated)

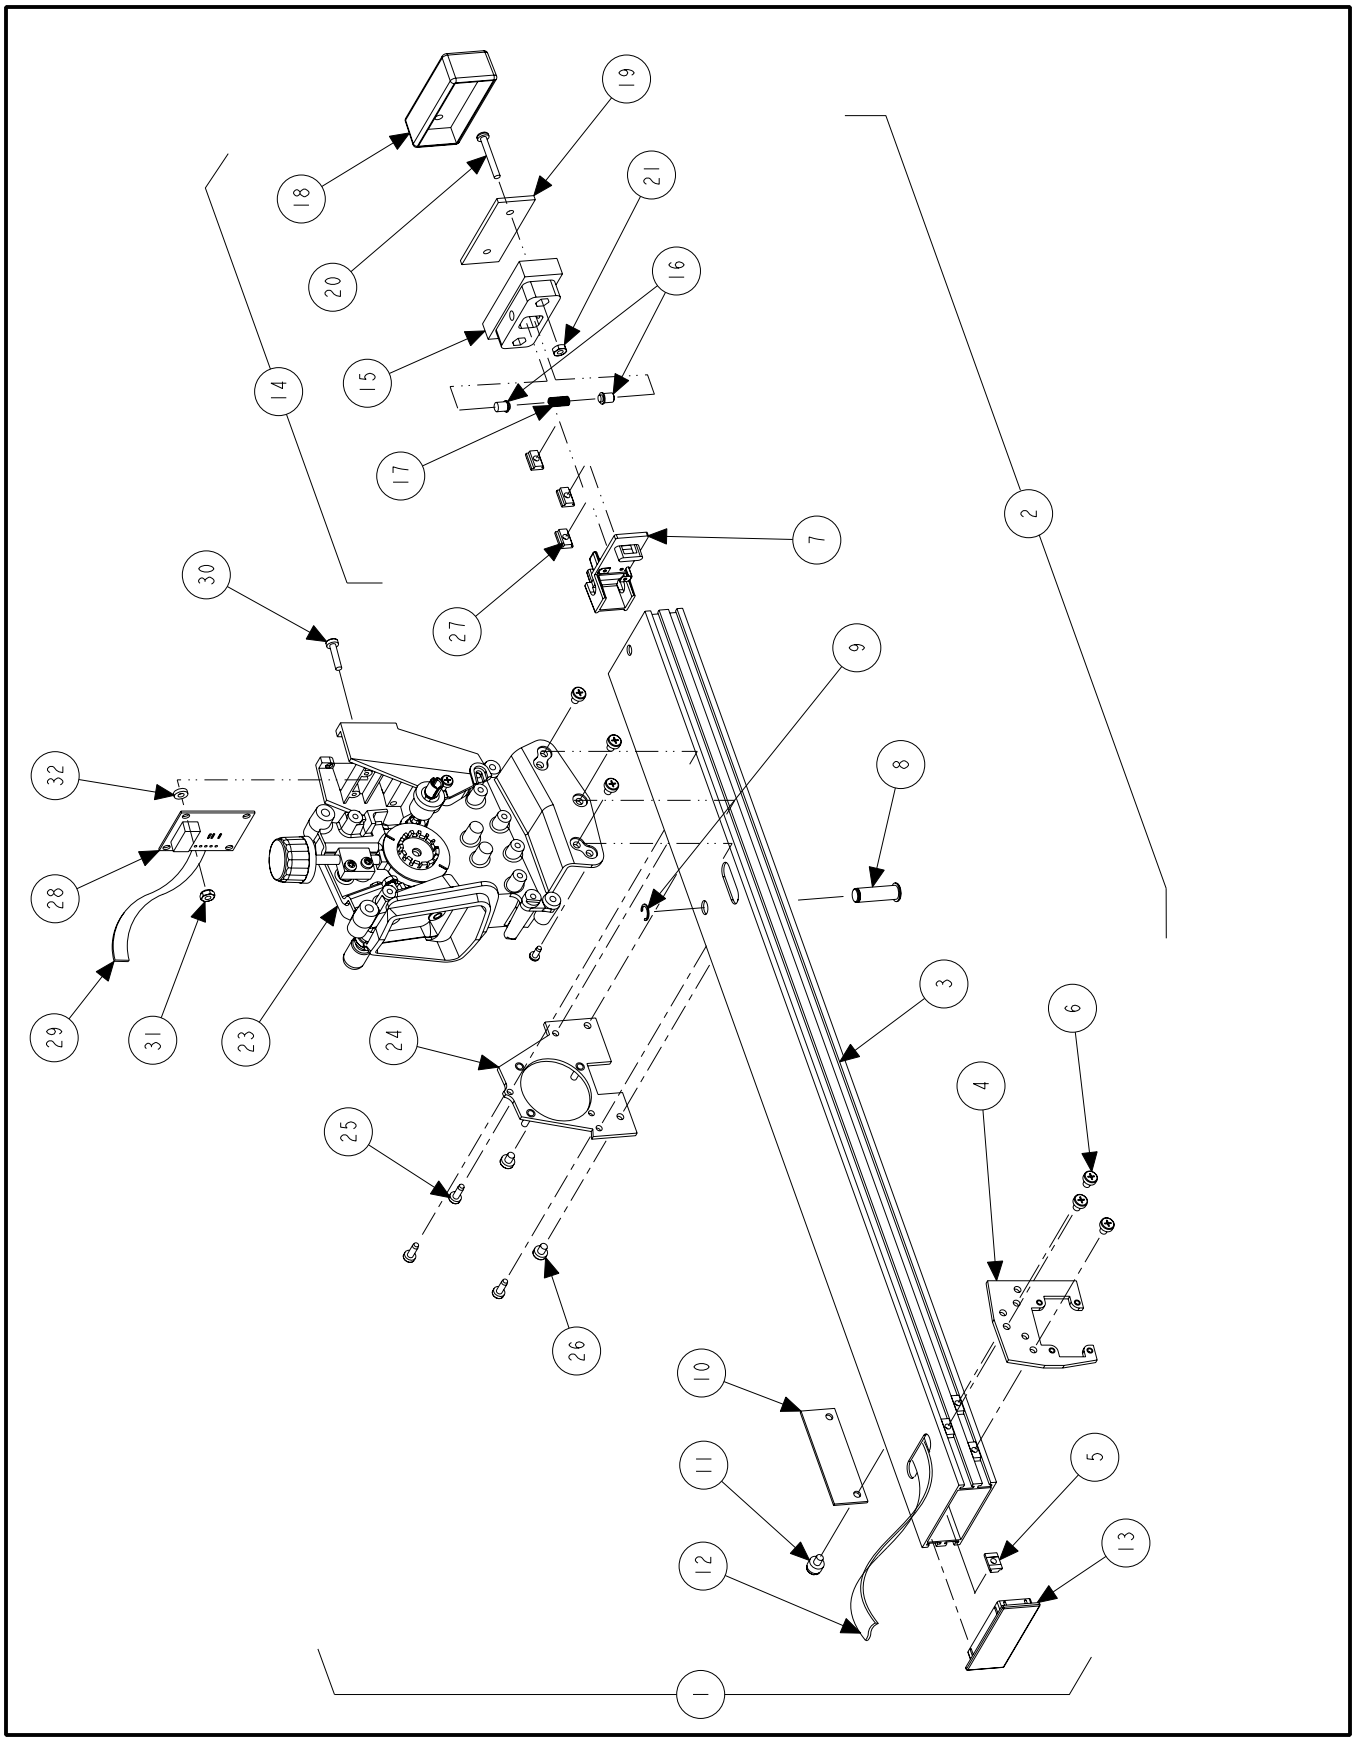

DSP506/DSP506T/508 SENSOR ASSEMBLY

REFER TO NEXT SHEET FOR PARTS DESCRIPTION LISTING

Index No.	Part Number	Description	506 XF	506	506T	506T XF
1	117-197-1	HANGER ASSEMBLY - DSP500/506T LEFT FRONT (Consisting Of:)	1	1	1	
1	117-198-1	HANGER ASSEMBLY - DSP500/506T RIGHT FRONT (Consisting Of:)	1	1	1	
1	117-199-1	HANGER ASSEMBLY - DSP500/506T LEFT FRONT (Consisting Of:)				1
1	117-200-1	HANGER ASSEMBLY - DSP500/506T RIGHT FRONT (Consisting Of:)				1
2	16-749-1	TUBE ASSEMBLY, TOE ARM LEFT FRONT/RIGHT REAR (Consisting Of:)	1			
OR	16-750-1	TUBE ASSEMBLY, TOE ARM RIGHT FRONT/LEFT REAR (Consisting Of:)	1			
OR	16-757-1	TUBE ASSEMBLY, TOE ARM LEFT FRONT/RIGHT REAR (Consisting Of:)		1		
OR	16-758-1	TUBE ASSEMBLY, TOE ARM RIGHT FRONT/LEFT REAR (Consisting Of:)		1		
OR	16-775-1	TUBE ASSEMBLY, TOE ARM DSP500T/506T LEFT FRONT (Consisting Of:)			1	
OR	16-776-1	TUBE ASSEMBLY, TOE ARM DSP500T/506T RIGHT FRONT (Consisting Of:)			1	
OR	16-777-1	TUBE ASSEMBLY, TOE ARM DSP500T/506T XF LEFT FRONT (Consisting Of:)				1
OR	16-778-1	TUBE ASSEMBLY, TOE ARM DSP500T/506T XF RIGHT FRONT (Consisting Of:)				1
3	16-748-011	TUBE, TOE ARM PAINTED	1	1		
OR	16-771-011	TUBE, TOEARM DSP506T			1	1
4	51-1984-1	PLATE ASSEMBLY, TRANS TOE	1	1		
OR	51-2053-1	PLATE ASSEMBLY, TRANS TOE DSP506T			1	1
5	76-382-2	NUT -T	5	5	5	5
6	75-608-2	PHMS 10-32 x .31 PR ZP	3	3	3	3
7	105-417-1	HOUSING ASSEMBLY, BATTERY CONTACT	1			1
8	135-363-2	PIN, BATTERY	1			1
9	112-75-2	SNAP RING - 5103-37	1			1
10	51-1980-011	PLATE, COUNTERWEIGHT, ADJUST	1	1	1	1
11	75-613-2	SCREW, THUMB 10-32 x 1/4 NYLON	2	2	2	2
12	38-798-1	CABLE, DSP300 TRANS. TOE, 36"	1	1		
OR	38-988-1	CABLE, DSP506T TRANS. TOE, 42”			1	1
13	53-141-2	CAP, TOE ARM	1	1	1	1
14	65-78-1	WEIGHT ASSEMBLY, COUNTER (Consisting Of:)	1			1
OR	65-83-1	WEIGHT ASSEMBLY, COUNTER NON-XF (Not Illustrated) (Consisting Of:)		1	1	
15	53-139-2	CAP, BATTERY COVER	1	1	1	1
16	43-137-2	PLUG, BUTTON PLUNGER	2	2	2	2
17	98-395-2	SPRING, COMPRESSION WEIGHT	1	1	1	1
18	53-142-2	CAP, BATTERY BUMPER	1	1	1	1
19	51-1979-002	PLATE, COUNTERWEIGHT	1	1	1	1
20	75-605-2	SCREW, STAP #8-32 TRILOB TX BZ	2			2
OR	75-295-2	RHMS 8-32 x 1-3/4 (Not Illustrated)		2	2	
21	76-23-2	NUT, HEX 8-32 ZP	2			2
22	65-80-2	WEIGHT, BATTERY REPLACEMENT (Not Illustrated)		1	1	
23	11-1055-1	SUPPORT ASSEMBLY, DSP500XF LEFT FRONT/RIGHT REAR (See Sheet 7)	1			1
OR	11-1056-1	SUPPORT ASSEMBLY, DSP500XF RIGHT FRONT/LEFT REAR (See Sheet 7)	1			1
OR	11-1080-1	SUPPORT ASSEMBLY, DSP500 RIGHT FRONT/LEFT REAR (See Sheet 7)		1	1	
OR	11-1081-1	SUPPORT ASSEMBLY, DSP500 LEFT FRONT/RIGHT REAR (See Sheet 7)		1	1	
24	51-1974-1	PLATE ASSEMBLY, RIGHT FRONT/LEFT REAR	1	1		
OR	51-1975-1	PLATE ASSEMBLY, LEFT FRONT/RIGHT REAR	1	1		
OR	51-2069-1	PLATE ASSEMBLY, REAR RF DSP506T			1	1
OR	51-2070-1	PLATE ASSEMBLY, REAR RF DSP506T			1	1
25	75-441-2	SCREW STAP 8-32 x .50 PH PR BZ	3	3	3	3
26	75-608-2	PHMS 10 - 32 x .31 PR ZP	5	5	5	5
27	76-382-2	NUT -T	5	5	5	5
28	109-70-2P	TRANSDUCER, DIGITAL CAM/CAS	1	1	1	1
29	37-530-1	WIRE DSP500 CAMBER, 10”	1	1	1	1
30	75-414-2	PHMS 8-32 x ¾ PR BZ	3	3	3	3
31	76-71-2	NUT, KEPS 8-32 ZP	3	3	3	3
32	77-309-2	WASHER, NYLON #8	2	2	2	2

PPP-Paint Code Required
A/R-As Required
REF-Reference

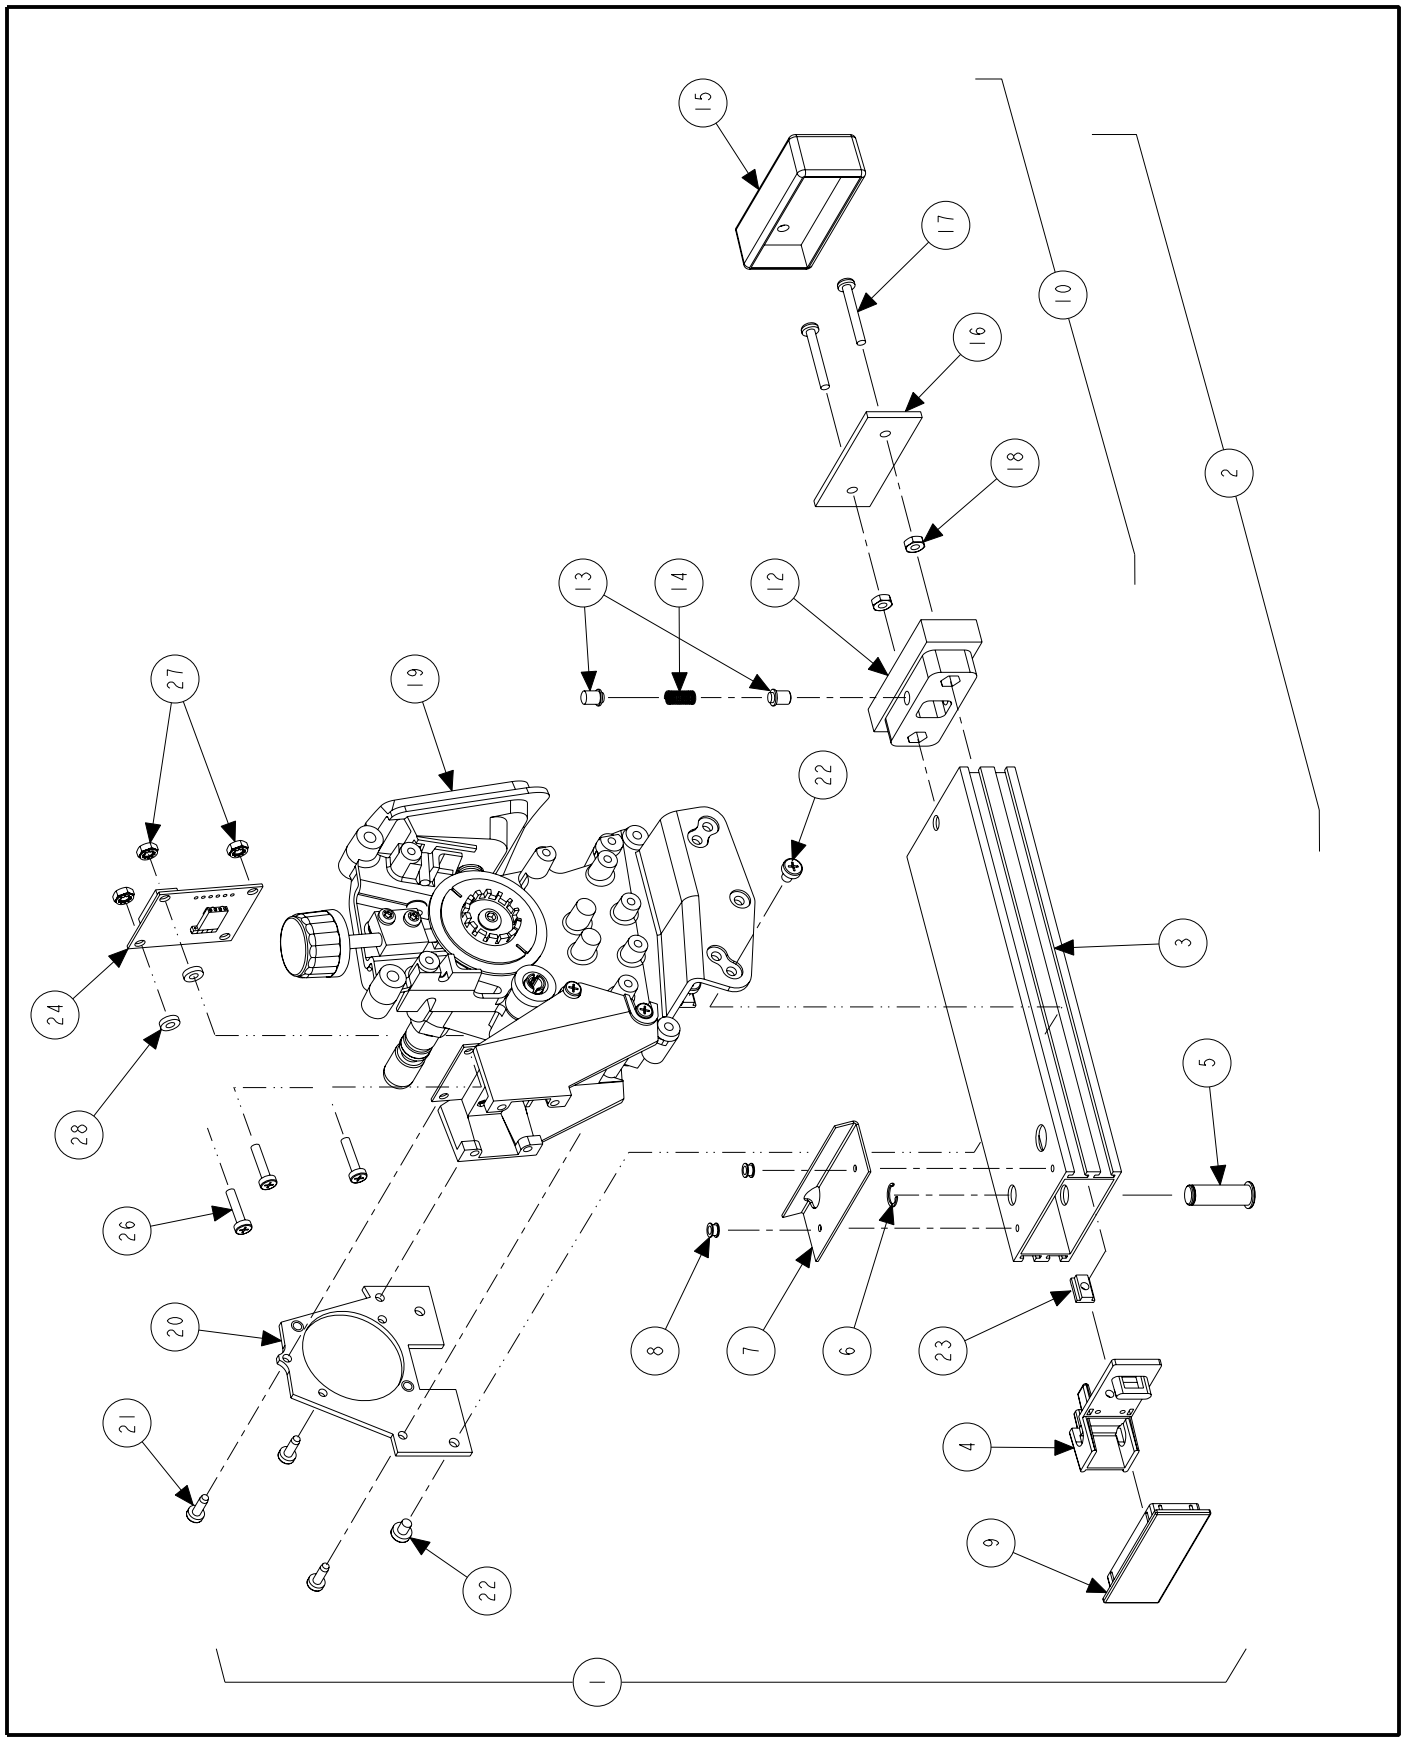

DSP506/506T/508 SENSOR ASSEMBLY

REFER TO NEXT SHEET FOR PARTS DESCRIPTION LISTING

Index No.	Part Number	Description	LEFT REAR 506	RIGHT REAR 506	LEFT REAR 506-XF 506T-XF	RIGHT REAR 506-XF 506T-XF	LEFT REAR 506T	RIGHT REAR 506T
1	117-189-1	HANGER ASSEMBLY - DSP506 XF LEFT REAR (Consisting Of:)			1			
OR	117-190-1	HANGER ASSEMBLY - DSP506 XF RIGHT REAR (Consisting Of:)				1		
OR	117-191-1	HANGER ASSEMBLY - DSP506 LEFT REAR (Consisting Of:)	1				1	
OR	117-192-1	HANGER ASSEMBLY - DSP506 RIGHT REAR (Consisting Of:)		1				1
2	16-760-1	TUBE ASSEMBLY - DSP506 XF LEFT REAR (Consisting Of:)			1	1		
OR	16-761-1	TUBE ASSEMBLY - DSP506 XF RIGHT REAR (Consisting Of:)	1	1			1	1
3	16-759-011	TUBE - TOE ARM DSP506 PAINTED	1	1	1	1	1	1
4	105-417-1	HOUSING ASSEMBLY - BATTERY CONTACT			1	1		
5	135-363-2	PIN - BATTERY DSP500			1	1		
6	112-75-2	SNAP RING - 5103-37			1	1		
7	14-1032-011	BRACKET WIRE - SHIELD PAINTED	1	1	1	1	1	1
8	48-28-2	RIVET, BLIND 1/8 x 1/4	2	2	2	2	2	2
9	53-141-2	CAP - TOE ARM	1	1	1	1	1	1
10	65-78-1	WEIGHT ASSEMBLY - COUNTER (Consisting Of:)			1	1		
11	65-83-1	WEIGHT ASSEMBLY - COUNTER (Not Illustrated) (Consisting Of:)	1	1			1	1
12	53-139-2	CAP - BATTERY COVER DSP500	1	1	1	1	1	1
13	43-137-2	PLUG - BUTTON PLUNGER DSP500	2	2	2	2	2	2
14	98-395-2	SPRING - COMPRESSION “C” WEIGHT	1	1	1	1	1	1
15	53-142-2	CAP - BATTERY BUMPER	1	1	1	1	1	1
16	51-1979-002	PLATE - COUNTERWEIGHT	1	1	1	1	1	1
17	75-605-2	SCREW - STAP #8-32 TRILOB TX BZ			2	2		
OR	75-295-2	RHMS 8-32 x 1-3/4 (Not Illustrated)	2	2			2	2
18	76-23-2	NUT - HEX 8-32 ZP			2	2		
OR	65-80-2	WEIGHT BATTERY REPLACEMENT (Not Illustrated)	1	1			1	1
19	11-1056-1	SUPPORT ASSEMBLY - DSP500XF RIGHT FRONT/LEFT REAR (See Sheet 7)			1			
OR	11-1055-1	SUPPORT ASSEMBLY - DSP500XF LEFT FRONT/RIGHT REAR (See Sheet 7)				1		
OR	11-1080-1	SUPPORT ASSEMBLY - DSP500 RIGHT FRONT/LEFT REAR (See Sheet 7)	1				1	
OR	11-1081-1	SUPPORT ASSEMBLY - DSP500 LEFT FRONT/RIGHT REAR (See Sheet 7)		1				1
20	51-1974-1	PLATE ASSEMBLY - RIGHT FRONT/LEFT REAR	1		1		1	
OR	51-1975-1	PLATE ASSEMBLY - LEFT FRONT/RIGHT REAR		1		1		1
21	75-441-2	SCREW - STAP 8-32 x .50 PH PR BZ	3	3	3	3	3	3
22	75-608-2	PHMS 10 - 32 x .31 PR ZP	5	5	5	5	5	5
23	76-382-2	NUT-T	5	5	5	5	5	5
24	109-70-2P	TRANSDUCER, SMT CAM/CAS	1	1	1	1	1	1
25	37-530-1	WIRE, DSP500 CAM/CAS 10” (Not Illustrated)	1	1	1	1	1	1
26	75-414-2	PHMS 8-32 x ¾ PR BZ	3	3	3	3	3	3
27	76-71-2	NUT, KEPS 8-32	3	3	3	3	3	3
28	77-309-2	WASHER, NYLON #8	2	2	2	2	2	2
29	109-107-1	TRANSDUCER ASSEMBLY, DSP500 RIDE HEIGHT (Not Illustrated) (See Sheet 11)		REF		REF		
OR	109-108-1	TRANSDUCER ASSEMBLY, DSP500 RIDE HEIGHT (Not Illustrated) (See Sheet 11)	REF		REF			

PPP-Paint Code Required
A/R-As Required
REF-Reference

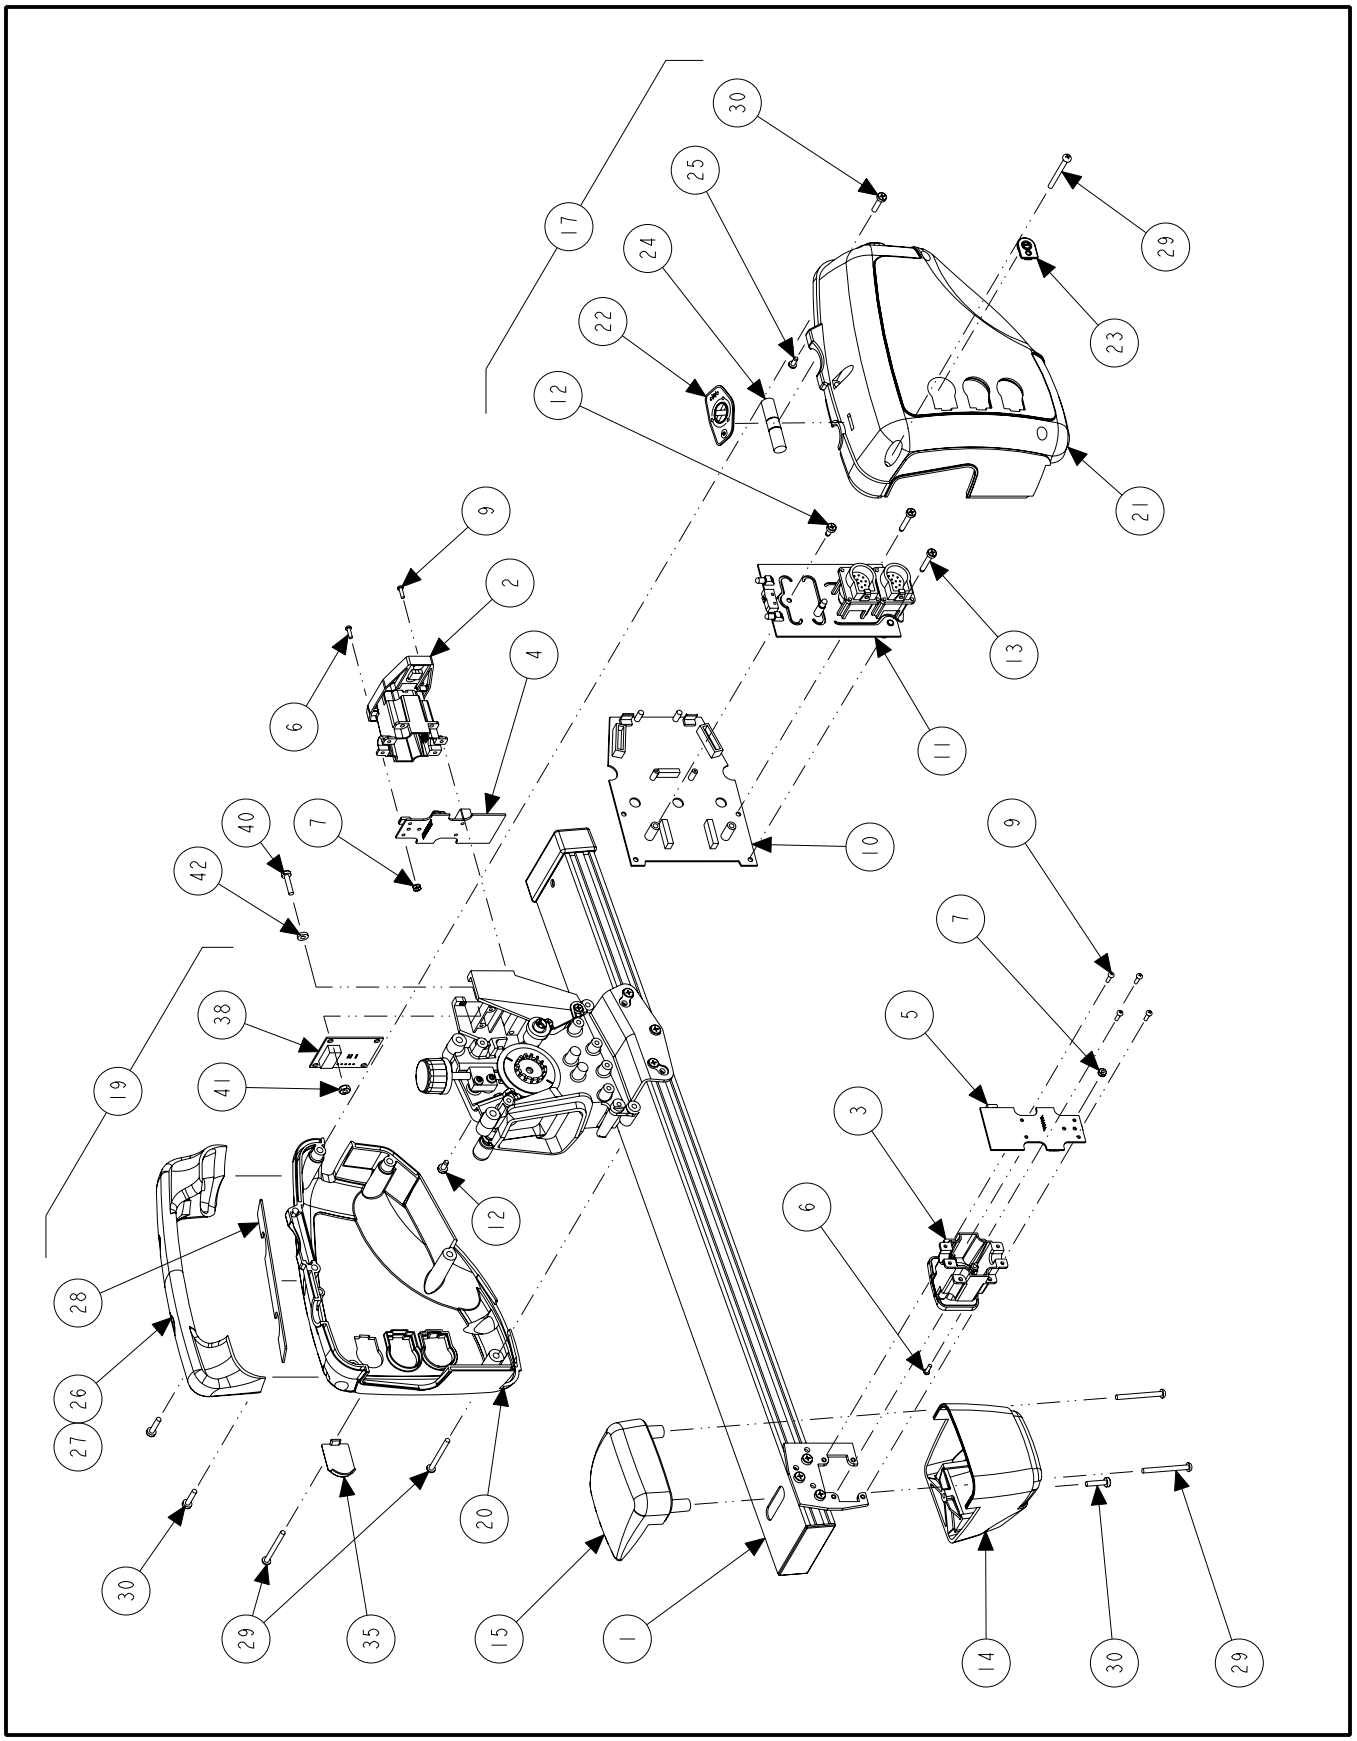

DSP506/506T/508 SENSOR ASSEMBLY

REFER TO NEXT SHEET FOR PARTS DESCRIPTION LISTING

Index No.	Part Number	Description	LEFT FRONT 506/508	RIGHT FRONT 506/508	LEFT REAR 508	RIGHT REAR 508
1	117-187-1	HANGER ASSEMBLY - DSP500 LEFT FRONT/RIGHT REAR (Consisting Of:)	REF			REF
OR	117-188-1	HANGER ASSEMBLY - DSP500 RIGHT FRONT/LEFT REAR (Consisting Of:)		REF	REF	
2	105-455-1	HOUSING ASSEMBLY - G2 LENS EMIT LEFT FRONT/RIGHT REAR	1			1
OR	105-456-1	HOUSING ASSEMBLY - G2 LENS EMIT RIGHT FRONT/LEFT REAR		1	1	
3	105-432-1	HOUSING ASSEMBLY - LENS EMIT TRANSVERSE	1	1	1	1
4	232-165-1	ELECT ASSEMBLY - DSP500 TOE (LONG)	1	1	1	1
OR	109-70-2	REPLACEMENT TRANSDUCER - SMT CAM/CAS (Not Illustrated)	1	1	1	1
5	232-186-1	ELECT ASSEMBLY - DSP500 TOE TRANSDUCER (Fredrick's Cell)	1	1	1	1
6	75-31-2	RHMS 4-40 x .38 PR ZP	4	4	4	4
7	76-59-2	NUT - KEPS 4-40	8	8	8	8
8	38-976-1	CABLE - LONG TOE, 5.5 (Not Illustrated)	1	1	1	1
9	75-31-2	RHMS 4-40 x .38 PR ZP	8	8	8	8
10	45-961-1	PCA- DSP 500 TRANSDUCER CONTROL	1	1	1	1
11	45-1053-1	PCA- DSP 500 BURNDY	1	1	1	1
12	75-326-2	SCREW - STAP 8-32 x 5/16 PH PR BZ	5	5	5	5
13	75-628-2	SCREW - STAP 8-32 x 1.12 PH PR BZ	2	2	2	2
14	69-1054-3	COVER - TOE BOX, W/ BUMPER	1	1	1	1
15	69-1047-2	COVER - TOE BOX UPPER	1	1	1	1
16	69-1084-1	COVER ASSEMBLY - RIGHT FRONT/LEFT REAR (Not Illustrated)		REF	REF	
17	69-1085-1	COVER ASSEMBLY - LEFT FRONT/RIGHT REAR	1			1
18	69-1086-1	COVER ASSEMBLY - RIGHT FRONT/LEFT REAR (Not Illustrated)		REF	REF	
19	69-1087-1	COVER ASSEMBLY - LEFT FRONT/RIGHT REAR	1			1
20	69-1045-2	COVER, DSP500 LEFT FRONT/RIGHT REAR INNER (Consisting Of:)	1			1
21	69-1051-3	COVER, LEFT FRONT/RIGHT REAR OUTER WITH BUMPER (Consisting Of:)	1			1
22	18-452-2	SWITCH, COMP DSP500	1	REF	REF	1
23	43-138-2	PLUG, BURNDY DSP500	1	REF	REF	1
24	25-141-2	GAGE LEVEL VIAL DSP500	1	REF	REF	1
25	75-615-2	SCREW, STAP 4-20 x 3/8	2	REF	REF	2
26	142-140-2	HANDLE, DSP500	1	REF	REF	1
27	75-616-2	SCREW, SELF TAPPING 8-16 x 1/2	2	REF	REF	2
28	64-150-2	PAD, HANDLE	1	REF	REF	1
29	75-295-2	RHMS 8-32 x 1-3/4 PR BZ	5	5	5	5
30	75-414-2	PHMS 8-32 x 3/4 PR BZ	4	4	4	4
31	128-429-2	DECAL - REAR WHEEL DESIGNATION (Not Illustrated)			1	1
32	128-390-2	DECAL - SENSOR DISCONNECT POWER (Not Illustrated)	2	2	2	2
33	24-51-2	NAMEPLATE - HUNTER MODEL & PART (Not Illustrated)	1	1	1	1
34	181-33-2	ELOP-EN DSP SENSORS (Not Illustrated)	2	2	2	2
35	53-144-2	CAP, BURNDY BLANKING	1	REF	REF	1
36	128-1003-3	DECAL, COMPOSITE DSP500 (Not Illustrated)	1	1	1	1
37	46-520-2	SPACER, 4-40 x 1.25 HEX SHOULDER (Not Illustrated) (Apply into 11-1069-2 Support)	4	4	4	4
38	109-99-2	TRANSDUCER, CAM/CAS DUAL AXIS	1	1	1	1
39	37-531-1	WIRE, DSP500 DUAL CAM/CAS 10" (Not Illustrated)	1	1	1	1
40	75-414-2	PHMS 8-32 x ¾ PR BZ	3	3	3	3
41	76-71-2	NUT, KEPS 8-32	3	3	3	3
42	77-309-2	WASHER, NYLON #8	2	2	2	2
43	109-107-1	TRANSDUCER ASSEMBLY, DSP500 RIDE HEIGHT (See Sheet 11)	REF			REF
OR	109-108-1	TRANSDUCER ASSEMBLY, DSP500 RIDE HEIGHT (See Sheet 11)		REF	REF	

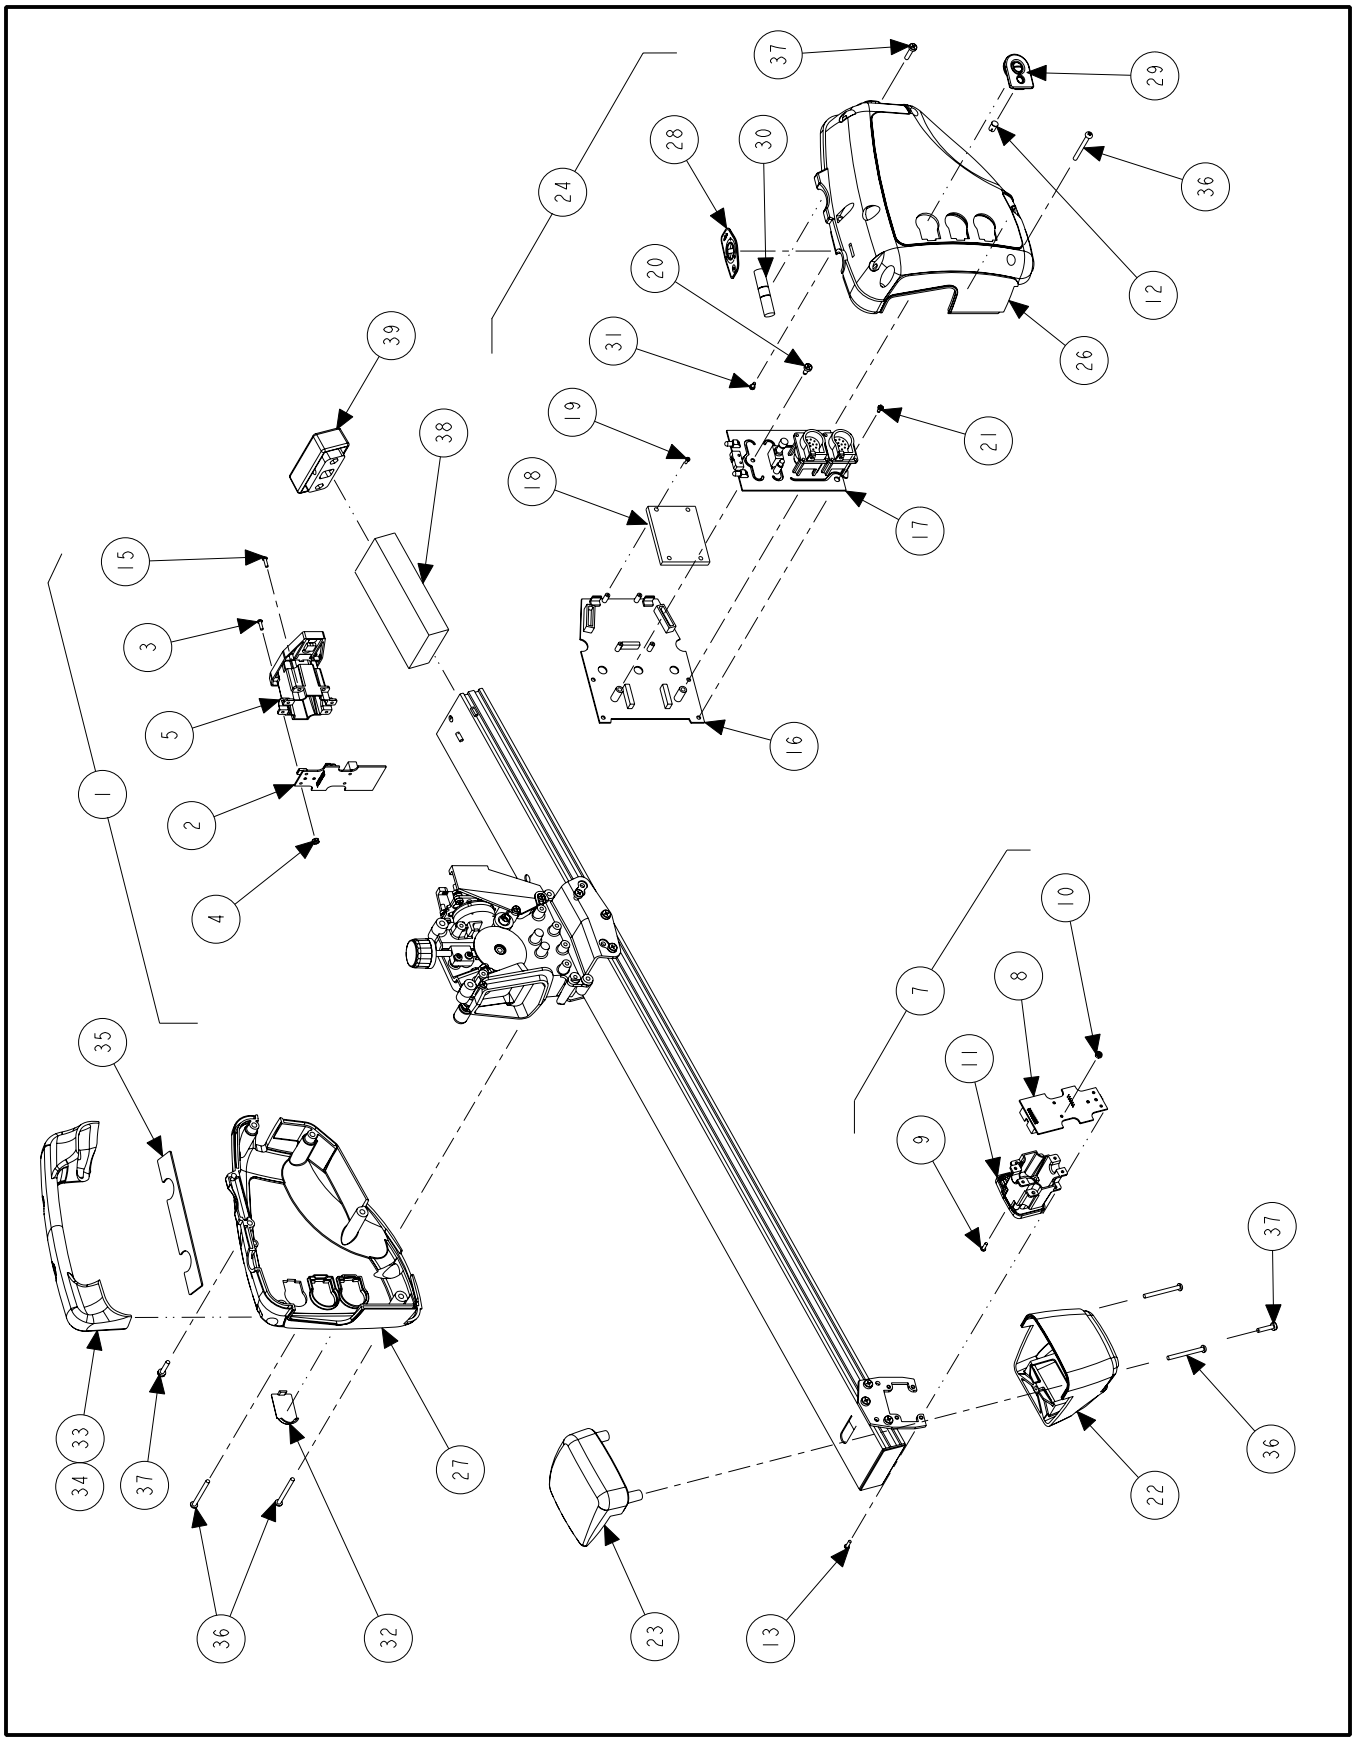

DSP506T/506T-XF SENSOR ASSEMBLY

REFER TO NEXT SHEET FOR PARTS DESCRIPTION LISTING

Index No.	Part Number	Description	LEFT FRONT 506T	RIGHT FRONT 506T	LEFT FRONT 506T-XF	RIGHT FRONT 506T-XF
1	105-425-1	HOUSING ASSEMBLY - LONG TOE LEFT FRONT/RIGHT REAR (Consisting Of:)	1		1	
OR	105-426-1	HOUSING ASSEMBLY - LONG TOE RIGHT LEFT FRONT/ LEFT REAR (Consisting Of:)		1		1
2	232-165-1	ELECTRONIC ASSEMBLY, DSP500 TOE LONG	1	1	1	1
3	75-31-2	RHMS 4-40 x .38 PR ZP	4	4	4	4
4	76-59-2	NUT, KEPS 4-40	4	4	4	4
5	105-455-1	HOUSING ASSEMBLY, G2 LENS/EMIT LF/RR	1		1	
OR	105-456-1	HOUSING ASSEMBLY, G2 LENS/EMIT RF/LR		1		1
6	46-520-2	SPACER, 4-40 x 1.25 HEX SHOULDER (Not Illustrated) (Apply into 11-1069-2 Support)	4	4	4	4
7	109-112-2	REPLACEMENT TRANSDUCER - 506T LF TRANS TOE (Consisting Of:)	1		1	
OR	109-113-2	REPLACEMENT TRANSDUCER - 506T RF TRANS TOE (Not Illustrated) (Consisting Of:)		1		1
8	232-186-1	ELECTRONIC ASSEMBLY - DSP500 TOE TRANSDUCER (Fredricks Cell)	1	1	1	1
9	75-31-2	RHMS 4-40 x .38 PR ZP	4	4	4	4
10	76-59-2	NUT, KEPS 4-40	4	4	4	4
11	105-432-1	HOUSING ASSEMBLY, LENS/EMIT TRANS	1		1	
OR	105-438-1	HOUSING ASSEMBLY, 506T TRANS TOE (Not Illustrated)		1		1
12	163-75-2	LENS LED			1	1
13	75-31-2	RHMS 4-40 x .38 PR ZP	4	4	4	4
14	38-976-1	CABLE - LONG TOE, 5.5 (Not Illustrated)	1	1	1	1
15	75-31-2	RHMS 4-40 x .38 PR ZP	4	4	4	4
16	45-961-1	PCA- DSP 500 TRANSDUCER CONTROL	1	1	1	1
OR	45-945-1	PCA, DSP 500 BATTERY CONTROL			1	1
17	45-1053-1	PCA- DSP 500 BURNDY	1	1	1	1
18	45-1177-1-1	PCA, XF RADIO TRANSCEIVER			1	1
19	75-618-2	PHMS 2-56 X ¼ PR ZP			4	4
20	75-326-2	SCREW - STAP 8-32 x 5/16 PH PR BZ	3	3	3	3
21	75-628-2	SCREW - STAP 8-32 x 1.12 PH PR BZ	2	2	2	2
22	69-1131-2	COVER ASSEMBLY - DSP506T TRANS TOE BOTTOM	1	1	1	1
23	69-1047-2	COVER ASSEMBLY - TOEBOX UPPER, DSP500	1	1	1	1
24	69-1084-1	COVER ASSEMBLY - FRONT, RIGHT FRONT/LEFT REAR		1		1
OR	69-1085-1	COVER ASSEMBLY - FRONT, LEFT FRONT/RIGHT REAR	1		1	
25	69-1086-1	COVER ASSEMBLY - REAR, RIGHT FRONT/LEFT REAR (Not Illustrated)		1		1
OR	69-1087-1	COVER ASSEMBLY - REAR, LEFT FRONT/RIGHT REAR (Not Illustrated)	1		1	
26	69-1045-2	COVER, DSP500 LEFT FRONT/RIGHT REAR INNER (Consisting Of:)	1			1
27	69-1051-3	COVER, LEFT FRONT RIGHT/REAR OUTER WITH BUMPER (Consisting Of:)	1			1
28	18-452-2	SWITCH, COMP DSP500	1	REF	REF	1
29	43-138-2	PLUG, BURNDY DSP500	1	REF	REF	1
30	25-141-2	GAGE LEVEL VIAL DSP500	1	REF	REF	1
31	75-615-2	SCREW, STAP 4-20 x 3/8	2	REF	REF	2
32	53-144-2	CAP, BURNDY BLANKING	2	REF	REF	2
33	142-140-2	HANDLE, DSP500	1	REF	REF	1
34	75-616-2	SCREW, SELF TAPPING 8-16 x 1/2	2	REF	REF	2
35	64-150-2	PAD, HANDLE	1	REF	REF	1
36	75-295-2	RHMS 8-32 x 1-3/4 PR BZ	5	5	5	5
37	75-414-2	PHMS 8-32 x 3/4 PR BZ	4	4	4	4
38	194-23-2	BATTERY, 12V, 2.3 AH LEAD ACID			1	1
39	65-78-1	WEIGHT ASSEMBLY, COUNTER			REF	REF
OR	65-83-1	WEIGHT ASSEMBLY, COUNTER NON-XF	REF	REF		
40	128-1160-2	DECAL-XF2 HIPWR APPROVAL (Not Illustrated)			1	1
41	128-1003-3	DECAL, COMPOSITE DSP500 (Not Illustrated)	1	1	1	1
42	24-51-2	NAMEPLATE - HUNTER MODEL & PART (Not Illustrated)	1	1	1	1
43	181-33-2	ELOP-EN DSP SENSORS (Not Illustrated)	1	1	1	1
44	128-390-2	DECAL - SENSOR DISCONNECT POWER (Not Illustrated)	2	2	2	2
45	65-84	WEIGHT SHIM (Not Illustrated)	1	1	1	1

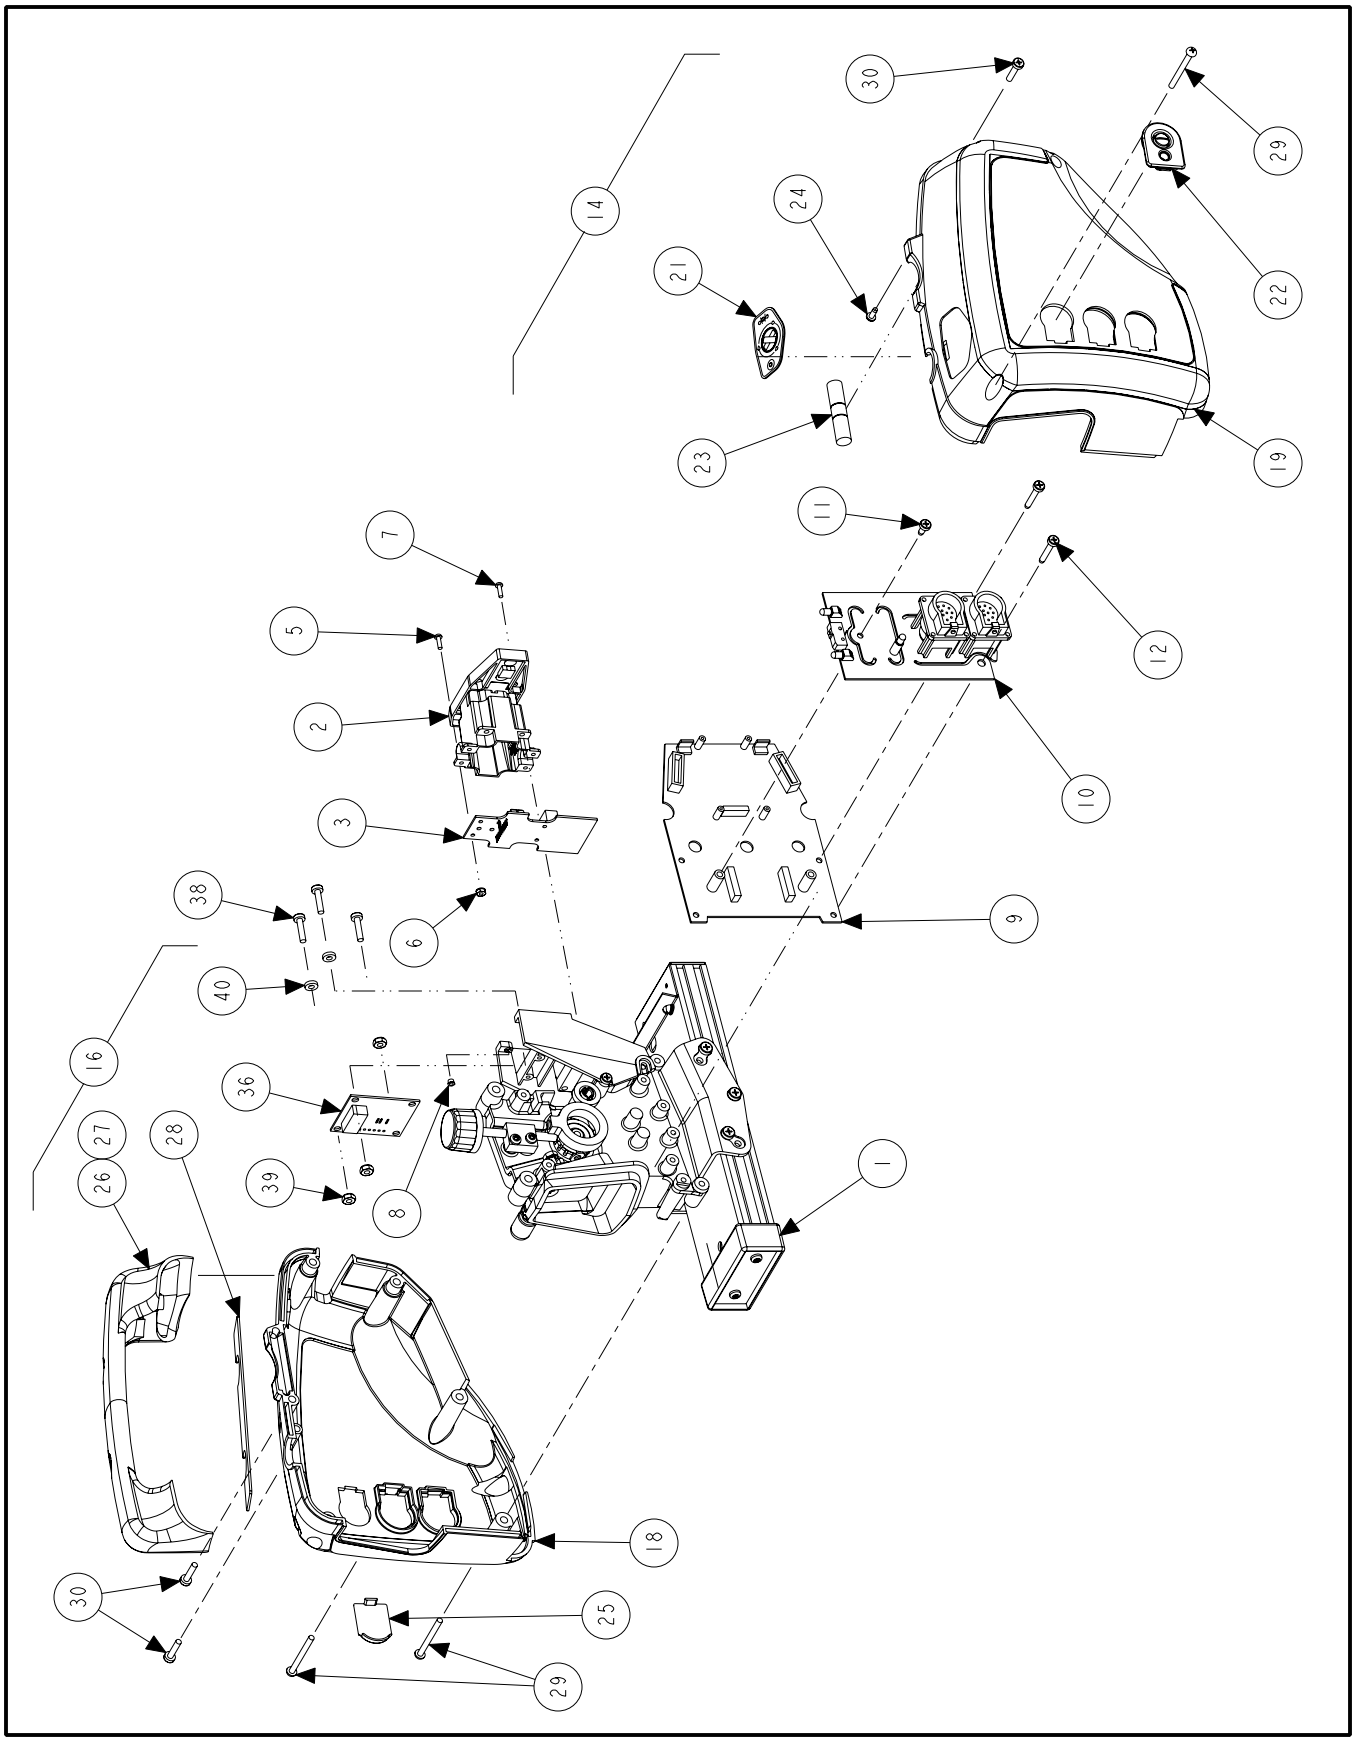

DSP506/506T SENSOR ASSEMBLY

REFER TO NEXT SHEET FOR PARTS DESCRIPTION LISTING

Index No.	Part Number	Description	LEFT REAR 506	RIGHT REAR 506	LEFT REAR 506T	RIGHT REAR 506T
1	117-191-1	HANGER ASSEMBLY - DSP506 LEFT REAR (Consisting Of:)	1		1	
OR	117-192-1	HANGER ASSEMBLY - DSP506 RIGHT REAR (Consisting Of:)		1		1
2	105-432-1	HOUSING ASSEMBLY – LENS EMIT TRANS (Consisting Of:)	1	1		1
OR	105-438-1	HOUSING ASSEMBLY – EMIT RIGHT FRONT/LEFT REAR (Consisting Of:)			1	
OR	105-455-1	HANGER ASSEMBLY, DSP506T LONG TOE Left Front		1		
OR	105-456-1	HANGER ASSEMBLY, DSP506T LONG TOE Right Front	1			
OR	105-442-1	HOUSING ASSEMBLY – LENS EMIT LR (Stronger Emitters Only for Rear)			1	
OR	105-441-1	HOUSING ASSEMBLY – LENS EMIT RR (Stronger Emitters Only for Rear)				1
3	232-165-1	ELECT ASSY - TOE LONG (Note-506T Sensors must be D board or later)	1	1	1	1
4	109-70-2	REPLACEMENT TRANSDUCER – SMT CAM/CAS (Not Illustrated)	1	1		
5	75-31-2	RHMS 4- 40 x .38 PR ZP	4	4		
6	76-59-2	NUT, KEPS 4-40	8	8		
7	75-31-2	RHMS 4- 40 x .38 PR ZP	4	4	4	4
8	46-520-2	SPACER - 4-40 x .125 W/HEX SHOULDER	4	4	4	4
9	45-961-1	PCA- DSP 500 TRANSDUCER CONTROL	1	1	1	1
10	45-1053-1	PCA- DSP 500 BURNDY	1	1	1	1
11	75-326-2	SCREW - STAP 8-32 x 5/16” PH PR BZ	3	3	3	3
12	75-628-2	SCREW - STAP 8-32 x 1" PH PR BZ	2	2	2	2
13	69-1084-1	COVER ASSEMBLY - RIGHT FRONT/LEFT REAR (Not Illustrated)	REF		REF	
14	69-1085-1	COVER ASSEMBLY - LEFT FRONT/RIGHT REAR (Consisting Of:)		1		REF
15	69-1086-1	COVER ASSEMBLY - RIGHT FRONT/LEFT REAR (Not Illustrated)	REF		REF	
16	69-1087-1	COVER ASSEMBLY - LEFT FRONT/RIGHT REAR (Consisting Of:)		1		REF
17	69-1044-2	COVER, DSP500 RIGHT FRONT/LEFT REAR INNER (Not Illustrated)	REF		REF	
18	69-1045-2	COVER, DSP500 LEFT FRONT/RIGHT REAR INNER (Consisting Of:)		1		REF
19	69-1051-3	COVER, LEFT FRONT/RIGHT REAR OUTER WITH BUMPER (Consisting Of:)		1		
20	69-1055-3	COVER, RIGHT FRONT/LEFT REAR OUTER WITH BUMPER (Not Illustrated)	REF		REF	REF
21	18-452-2	SWITCH, COMP DSP500	REF	1	REF	REF
22	43-138-2	PLUG, BURNDY DSP500	REF	1	REF	REF
23	25-141-2	GAGE LEVEL VIAL DSP500	REF	1	REF	REF
24	75-615-2	SCREW, STAP 4-20 x 3/8	REF	2	REF	REF
25	53-144-2	CAP, BURNDY BLANKING	REF	2	REF	REF
26	142-140-2	HANDLE, DSP500	REF	1	REF	REF
27	75-616-2	SCREW, SELF TAPPING 8-16 x 1/2	REF	2	REF	REF
28	64-150-2	PAD, HANDLE	REF	1	REF	REF
29	75-295-2	RHMS 8-32 x 1-3/4 PR BZ	3	3	3	3
30	75-414-2	PHMS 8-32 x 3/4 PR BZ	3	3	3	3
31	128-1003-3	DECAL - COMPOSITE DSP500 (Not Illustrated)	1	1	1	1
32	128-390-2	DECAL - SENSOR DISCONNECT POWER (Not Illustrated)	2	2	1	1
33	24-54-2	NAMEPLATE - PATENT LABEL (Not Illustrated)	1	1		
34	24-51-2	NAMEPLATE - HUNTER MODEL & PART (Not Illustrated)	1	1	1	1
35	181-33-2	ELOP-EN DSP SENSORS (Not Illustrated)	2	2	1	1
36	109-70-2P	TRANSDUCER, DIGITAL CAM/CAS	1	1	1	1
37	37-530-1	WIRE, DSP500 CAMBER, 10” (Not Illustrated)	1	1	1	1
38	75-414-2	PHMS 8-32 x 3/4 PR BZ	3	3	3	3
39	76-71-2	NUT, KEPS 8-32	3	3	3	3
40	77-309-2	WASHER, NYLON #8	2	2	2	2
41	109-107-1	TRANSDUCER ASSEMBLY, DSP500 RIDE HEIGHT (See Sheet 11)		1		
OR	109-108-1	TRANSDUCER ASSEMBLY, DSP500 RIDE HEIGHT (See Sheet 11)	1			
42	65-84	WEIGHT SHIM (Not Illustrated)			1	1
43	94-11-2	TIE, CABLE (Not Illustrated)			3	3

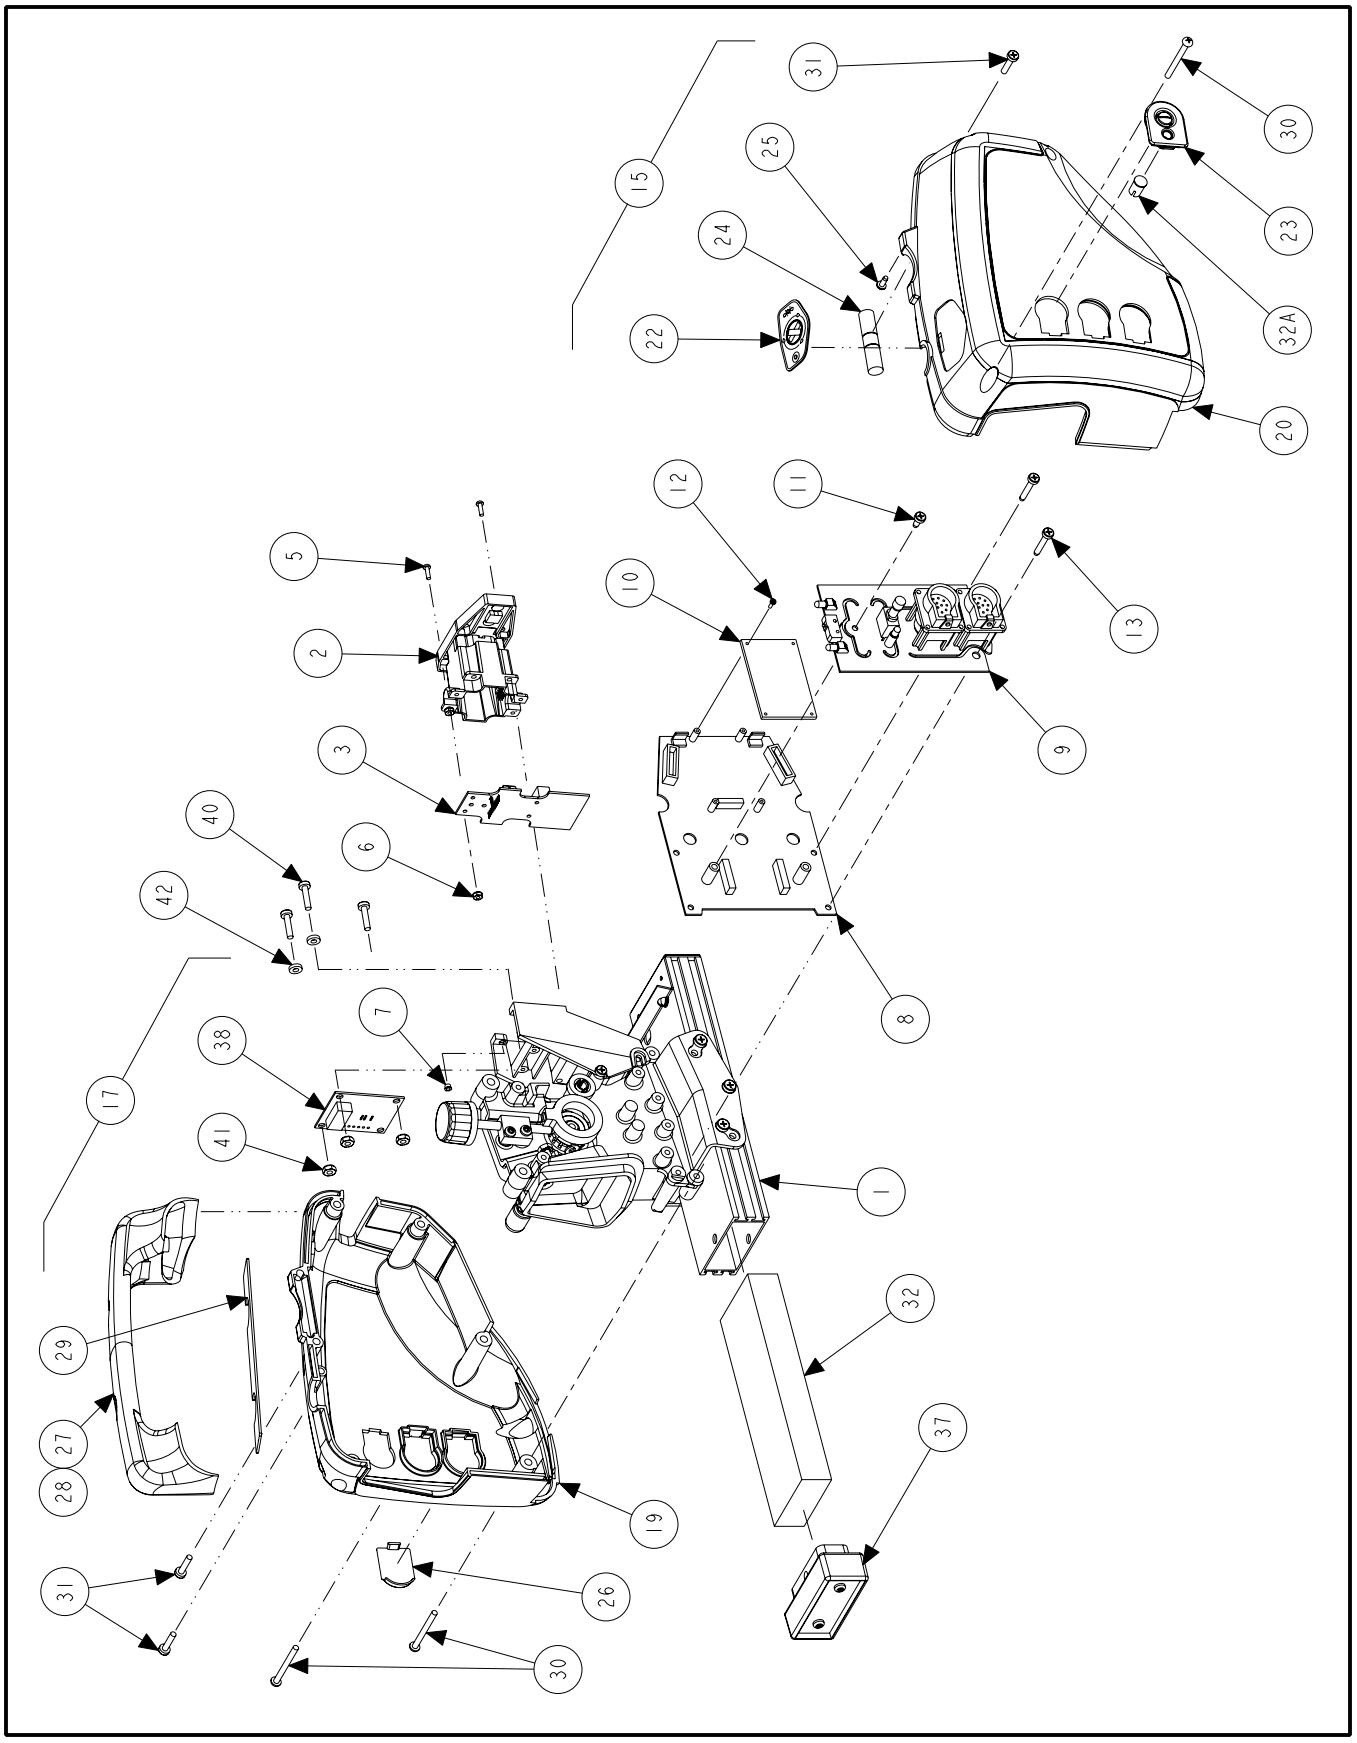

DSP506-XF/506T-XF SENSOR ASSEMBLY

REFER TO NEXT SHEET FOR PARTS DESCRIPTION LISTING

Index No.	Part Number	Description	LEFT REAR 506TXF	RIGHT REAR 506TXF	LEFT REAR 506XF	RIGHT REAR 506XF
1	117-189-1	HANGER ASSEMBLY - DSP506 XF LEFT REAR (Consisting Of:)	1		1	
OR	117-190-1	HANGER ASSEMBLY - DSP506 XF RIGHT REAR (Consisting Of:)		1		1
2	105-432-1	HOUSING ASSEMBLY - LENS EMIT TRANS (Consisting Of:)		1		1
OR	105-438-1	HOUSING ASSEMBLY - EMIT RIGHT (Consisting Of:)	1		1	
OR	105-455-1	HOUSING ASSEMBLY, DSP506T LONG TOE Left Front				1
OR	105-456-1	HOUSING ASSEMBLY, DSP506T LONG TOE Right Front			1	
OR	105-442-1	HOUSING ASSEMBLY - LENS EMIT LR (Stronger Emitters Only for Rear)	1			
OR	105-441-1	HOUSING ASSEMBLY - LENS EMIT RR (Stronger Emitters Only for Rear)		1		
3	232-165-1	ELECTRONIC ASSEMBLY - DSP500 TOE (LONG)	1	1	1	1
4	109-70-2	REPLACEMENT TRANSDUCER - SMT CAM/CAS (Not Illustrated)	1	1	1	1
5	75-31-2	RHMS 4- 40 x .38 PR ZP	4	4	4	4
6	76-59-2	NUT, KEPS 4-40	8	8	8	8
7	46-520-2	SPACER - 4-40 x .125 W/ HEX SHOULDER	4	4	4	4
8	45-961-1	PCA - DSP 500 TRANSDUCER CONTROL	1	1	1	1
9	45-945-1	PCA - DSP 500 BATTERY CONTROL	1	1	1	1
10	45-1177-1-1	PCA - XF RADIO TRANSCEIVER	1	1	1	1
11	75-326-2	SCREW - STAP 8-32 x 5/16 PH PR BZ	5	5	5	5
12	75-618-2	PHMS 2-56 X ¼ PR ZP	4	4	4	4
13	75-628-2	SCREW - STAP 8-32 x 1.12" PH PR BZ	2	2	2	2
14	69-1084-1	COVER ASSEMBLY - RIGHT FRONT/LEFT REAR (Not Illustrated)	1		REF	
15	69-1085-1	COVER ASSEMBLY - LEFT FRONT/RIGHT REAR (Consisting Of:)		REF		1
16	69-1086-1	COVER ASSEMBLY - RIGHT FRONT/LEFT REAR (Not Illustrated)	1		REF	
17	69-1087-1	COVER ASSEMBLY - LEFT FRONT/RIGHT REAR (Consisting Of:)		REF		1
18	69-1044-2	COVER, DSP500 RIGHT FRONT/LEFT REAR INNER (Not Illustrated)	1		REF	
19	69-1045-2	COVER, DSP500 LEFT FRONT/RIGHT REAR INNER (Consisting Of:)		REF		1
20	69-1051-3	COVER, LEFT FRONT/RIGHT REAR OUTER WITH BUMPER (Consisting Of:)		REF		1
21	69-1055-3	COVER, RIGHT FRONT/LEFT REAR OUTER WITH BUMPER (Not Illustrated)	1		REF	
22	18-452-2	SWITCH, COMP DSP500	1	REF	REF	1
23	43-138-2	PLUG, BURNDY DSP500	1	REF	REF	1
24	25-141-2	GAGE LEVEL VIAL DSP500	1	REF	REF	1
25	75-615-2	SCREW, STAP 4-20 x 3/8	2	REF	REF	2
26	53-144-2	CAP, BURNDY BLANKING	2	REF	REF	2
27	142-140-2	HANDLE, DSP500	1	REF	REF	1
28	75-616-2	SCREW, SELF TAPPING 8-16 x 1/2	2	REF	REF	2
29	64-150-2	PAD, HANDLE	1	REF	REF	1
30	75-295-2	RHMS 8-32 x 1-3/4 PR BZ	3	3	3	3
31	75-414-2	PHMS 8-32 x 3/4 PR BZ	3	3	3	3
32	194-23-2	BATTERY 12 VOLT 2.3 AH LEAD-ACID	1	1	1	1
32A	163-75-2	LENS, LED	1	1		
33	128-1003-3	DECAL - SENSOR LOCATION WARNING (Not Illustrated)	1	1	1	1
34	128-390-2	DECAL - SENSOR DISCONNECT POWER (Not Illustrated)	2	2	2	2
35	24-51-2	NAMEPLATE - HUNTER MODEL & PART (Not Illustrated)	1	1	1	1
36	181-33-2	ELOP-EN DSP SENSORS (Not Illustrated)	2	2	2	2
36A	128-1160-2	DECAL-XF2 HIPWR APPROVAL (Not Illustrated)	1	1	1	1
37	65-78-1	WEIGHT ASSEMBLY COUNTER (See Sheet 4)			REF	REF
37A	65-84-2	WEIGHT, SHIM (Not Illustrated)	1	1		
37B	94-11-2	TIE, CABLE (Not Illustrated)	1	1		
38	109-70-2P	TRANSDUCER, DIGITAL CAM\CAS			1	1
39	37-530-1	WIRE, DSP500 CAMBER 10" (Not Illustrated)			1	1
40	75-414-2	PHMS 8-32 x 3/4 PR BZ			3	3
41	76-71-2	NUT, KEPS 8-32			3	3
42	77-309-2	WASHER, NYLON #8			2	2
43	109-107-1	TRANSDUCER ASSEMBLY, DSP500 RIDE HEIGHT (See Sheet 11) (Not Illustrated)				1
OR	109-108-1	TRANSDUCER ASSEMBLY, DSP500 RIDE HEIGHT (See Sheet 11) (Not Illustrated)			1	

PPP-Paint Code Required
A/R-As Required
REF-Reference

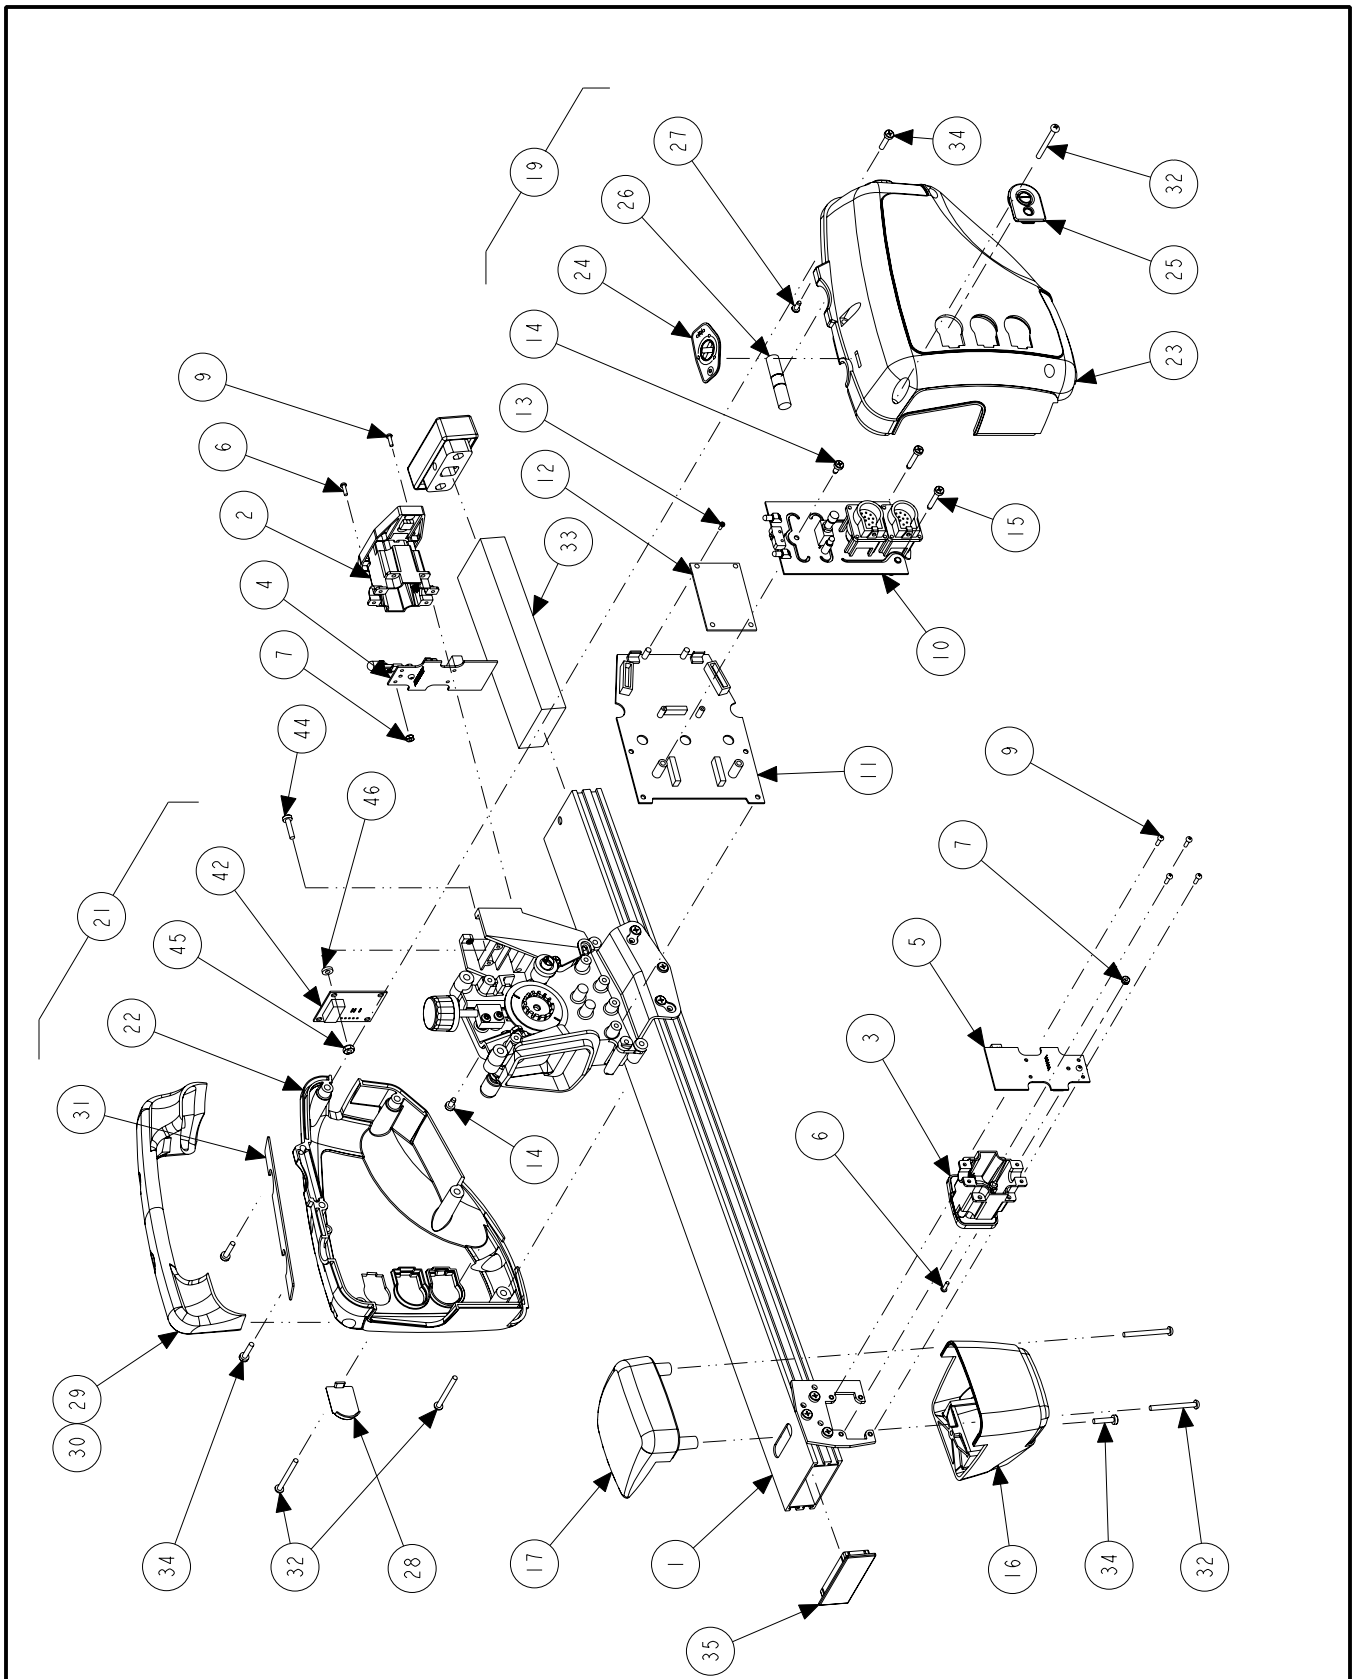

DSP506/508-XF SENSOR ASSEMBLY

REFER TO NEXT SHEET FOR PARTS DESCRIPTION LISTING

Index No.	Part Number	Description	LEFT FRONT 506/508XF	RIGHT FRONT 506/508XF	LEFT REAR 508XF	RIGHT REAR 508XF
1	117-183-1	HANGER ASSEMBLY - DSP500 XF LEFT FRONT/RIGHT REAR (Consisting Of:)	REF			REF
OR	117-184-1	HANGER ASSEMBLY - DSP500 XF RIGHT FRONT/LEFT REAR (Consisting Of:)		REF	REF	
2	105-455-1	HOUSING ASSEMBLY, G2 LENS EMIT LONG TOE	1			1
OR	105-456-1	HOUSING ASSEMBLY, G2 LENS EMIT LONG TOE		1	1	
3	105-432-1	HOUSING ASSEMBLY - EMIT TRANSVERSE (Consisting Of:)	1	1	1	1
4	232-165-1	ELECT ASSY - DSP500 TOE (LONG)	1	1	1	1
OR	109-70-2	REPLACEMENT TRANSDUCER - SMT CAM/CAS (Not Illustrated)	1	1	1	1
5	232-166-1	ELECT ASSY - DSP500 TOE TRANSVERSE	1	1	1	1
6	75-31-2	RHMS 4-40 x .38 PR ZP	4	4	4	4
7	76-59-2	NUT, KEPS 4-40	8	8	8	8
8	38-976-1	CABLE - LONG TOE, 10" (Not Illustrated)	1	1	1	1
9	75-31-2	RHMS 4- 40 x .38 PR ZP	8	8	8	8
10	45-945-1	PCA - DSP500 BATTERY CONTROL	1	1	1	1
11	45-961-1	PCA - DSP500 TRANSDUCER CONTROL	1	1	1	1
12	45-1177-1-1	PCA - XF RADIO TRANSCEIVER	1	1	1	1
13	75-618-2	PHMS 2-56 x ¼ PR ZP	4	4	4	4
14	75-326-2	SCREW - STAP 8-32 x 5/16 PH PR BZ	5	5	5	5
15	75-628-2	SCREW - STAP 8-32 x 1" PH PR BZ	2	2	2	2
16	69-1054-3	COVER - TOE BOX, WITH BUMPER	1	1	1	1
17	69-1047-2	COVER - TOE BOX UPPER	1	1	1	1
18	69-1084-1	COVER ASSEMBLY - RIGHT FRONT/LEFT REAR (Not Illustrated)		REF	REF	
19	69-1085-1	COVER ASSEMBLY - LEFT FRONT/RIGHT REAR (Consisting Of:)	1			1
20	69-1086-1	COVER ASSEMBLY - RIGHT FRONT/LEFT REAR (Not Illustrated)		REF	REF	
21	69-1087-1	COVER ASSEMBLY - LEFT FRONT/RIGHT REAR (Consisting Of:)	1			1
22	69-1045-2	COVER, DSP500 LEFT FRONT/RIGHT REAR INNER (Consisting Of:)	1			1
23	69-1051-3	COVER, LEFT FRONT RIGHT/REAR OUTER WITH BUMPER (Consisting Of:)	1			1
24	18-452-2	SWITCH, COMP DSP500	1	REF	REF	1
25	43-138-2	PLUG, BURNDY DSP500	1	REF	REF	1
26	25-141-2	GAGE LEVEL VIAL DSP500	1	REF	REF	1
27	75-615-2	SCREW, STAP 4-20 x 3/8	2	REF	REF	2
28	53-144-2	CAP, BURNDY BLANKING	2	REF	REF	2
29	142-140-2	HANDLE, DSP500	1	REF	REF	1
30	75-616-2	SCREW, SELF TAPPING 8-16 x 1/2	2	REF	REF	2
31	64-150-2	PAD, HANDLE	1	REF	REF	1
32	75-295-2	RHMS 8-32 x 1-3/4 PR BZ	5	5	5	5
33	194-23-2	BATTERY 12 VOLT, 2.3 AH, LEAD ACID	1	1	1	1
34	75-414-2	PHMS 8-32 x 3/4 PR BZ	4	4	4	4
35	53-141-2	CAP, TOE ARM	REF	REF	REF	REF
36	128-429-2	DECAL - REAR WHEEL DESIGNATION (Not Illustrated)	1	1	1	1
36A	128-1160-2	DECAL-XF2 HIPWR APPROVAL (Not Illustrated)	1	1	1	1
37	128-1003-3	DECAL - COMPOSITE (Not Illustrated)	1	1	1	1
38	128-390-2	DECAL - SENSOR DISCONNECT POWER (Not Illustrated)	2	2	2	2
39	46-520-2	SPACER, 4-40 x .125 HEX (Not Illustrated) (Apply into 11-1069-2 Support)	1	1	1	1
40	24-51-2	NAMEPLATE - HUNTER MODEL & PART (Not Illustrated)	1	1	1	1
41	181-33-2	ELOP-EN DSP SENSORS (Not Illustrated)	2	2	2	2
42	109-99-2	TRANSDUCER, CAM/CAS DUAL AXIS	1	1	1	1
43	37-531-1	WIRE, DSP500 DUAL CAM/CAS 10" (Not Illustrated)	1	1	1	1
44	75-414-2	PHMS 8-32 x 3/4 PR BZ	3	3	3	3
45	76-71-2	NUT, KEPS 8-32	3	3	3	3
46	77-309-2	WASHER, NYLON #8	2	2	2	2
47	109-107-1	TRANSDUCER ASSEMBLY, DSP500 RIDE HEIGHT (See Sheet 11)	REF			REF
OR	109-108-1	TRANSDUCER ASSEMBLY, DSP500 RIDE HEIGHT (See Sheet 11)		REF	REF	

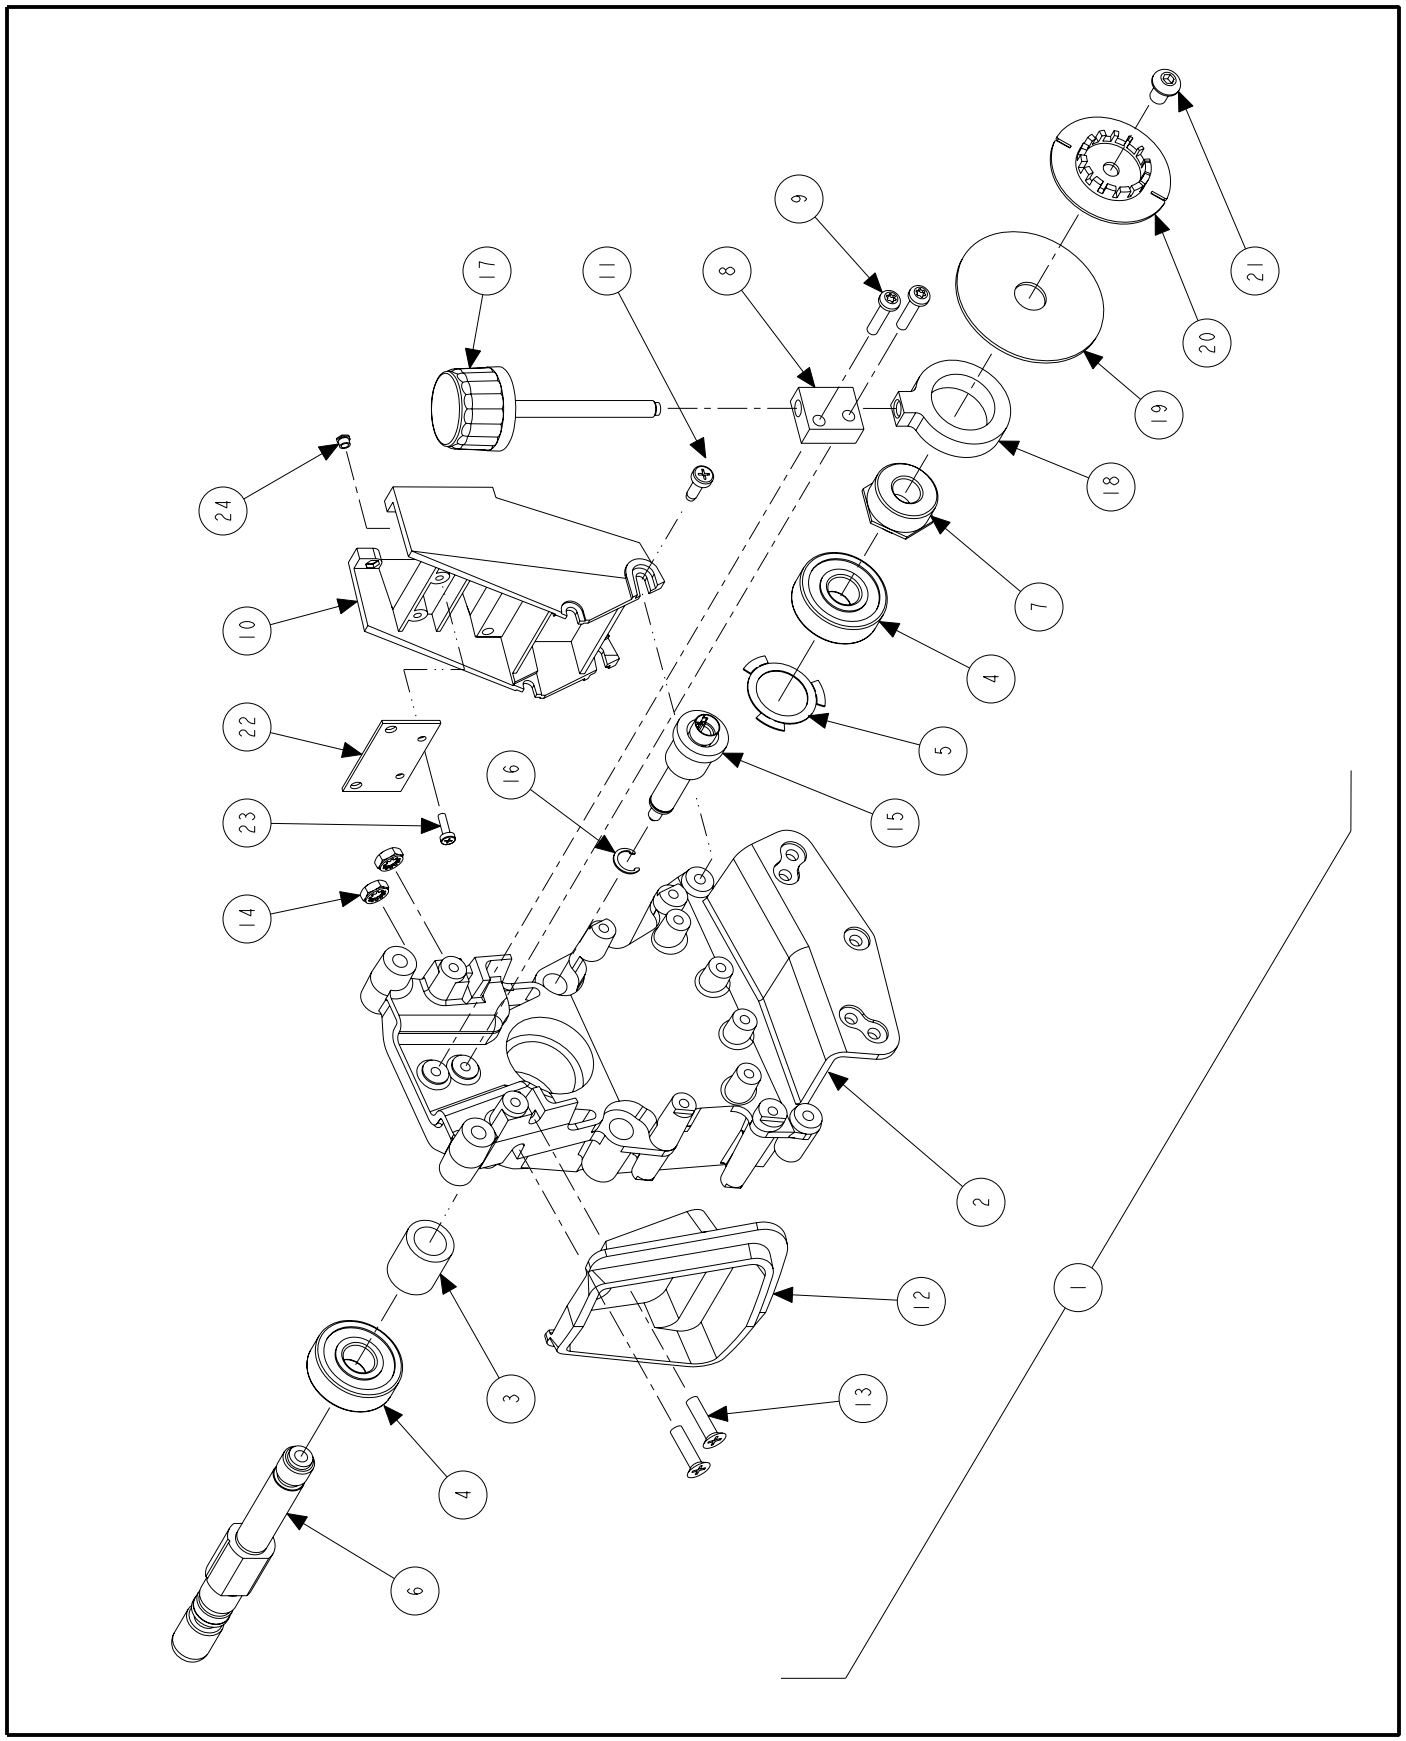

DSP506/508 SENSOR ASSEMBLY

REFER TO NEXT SHEET FOR PARTS DESCRIPTION LISTING

Index No.	Part Number	Description	506 XF 508 XF	506 508
1	11-1055-1	SUPPORT ASSEMBLY - XF LEFT FRONT/RIGHT REAR	1	
OR	11-1056-1	SUPPORT ASSEMBLY - XF RIGHT FRONT/LEFT REAR	1	
OR	11-1080-1	SUPPORT ASSEMBLY - RIGHT FRONT/LEFT REAR		1
OR	11-1081-1	SUPPORT ASSEMBLY - LEFT FRONT/RIGHT REAR		1
2	11-1082-2	SUPPORT- SENSOR DIECAST	1	1
3	46-414-2	SPACER - BEARING	1	1
4	130-116-2	BEARING - SENSOR	2	2
5	98-323-2	SPRING - WASHER	1	1
6	97-471-2	SHAFT	1	1
7	76-313-2	NUT - HUB	1	1
8	121-213-2	BLOCK - LOCK	1	1
9	75-472-2	SCREW - STAP 8-32 x .75 PH TX BZ	2	2
10	11-1069-2	SUPPORT - LONG TOE	1	1
11	75-446-2	SCREW - STAP 8-32 x 3/8 PH PR BZ	4	4
12	117-185-1	HANGER ASSEMBLY - RECHARGE	1	
OR	101-177-2	CASTING - SENSOR HANGER		1
13	75-609-2	FHMS 10 - 32 x .87 PR FTHD ZP	2	2
14	76-61-2	NUT - KEPS 10-32 ZP	2	2
15	178-27-1	COUPLING ASSEMBLY - ENCODER	1	1
16	112-75-2	SNAP RING - 5103-37	1	1
17	34-127-3	KNOB - LOCK	1	1
18	223-56-2	RING - BRAKE	1	1
19	99-72-2	GEAR - SPUR 2.25	1	1
20	158-83-2	WHEEL - ENCODER	1	1
21	75-614-2	SBHCS 1/4 - 28 - 3/8 FTHD BO	1	1
22	51-1994	PLATE, CAMBER	1	1
23	75-639-2	PHMS 4-40 x 3/8 PR ZP	2	2
24	46-520-2	SPACER 4-40 x 1.25 W/ HEX SHOULDER	2	2

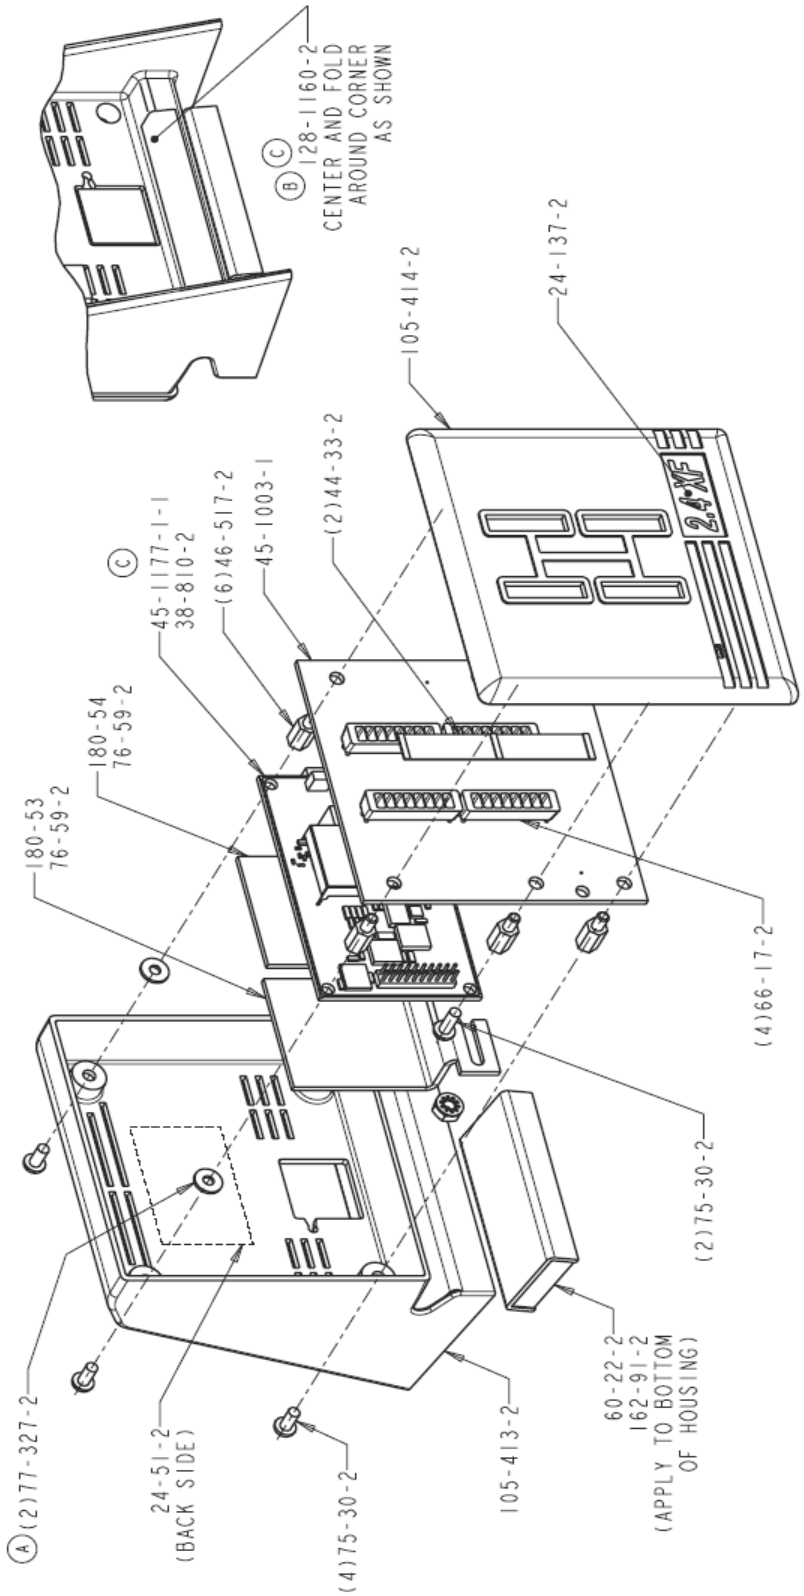

DSP506/508 SENSOR ASSEMBLY

REFER TO NEXT SHEET FOR PARTS DESCRIPTION LISTING

Part Number	Description	Qty.
232-201-1	ELECTRONIC ASSEMBLY, 2.4 XF POD (Consisting Of:)	1
105-414-2	HOUSING-FRONT 2.4 XF POD	1
105-413-2	HOUSING-REAR 2.4 XF POD	1
46-517-2	STANDOFF-3/16 HEX 5/16LG 4-40	6
75-30-2	RHMS 4-40X1/4 PR ZP	6
77-327-2	WASHER, NYLON .277 OD X .108 ID	2
45-1003-1	PCA-XF POD	1
45-1177-1-1	ZIGBEE RADIO G2	1
38-810-2	CABLE-8COND PHONE W/CONN'S 6' (Not Illustrated)	1
66-17-2	SEPARATOR LED 2.4 XF POD	4
180-53	HEATSINK LH-MINIPOD	1
180-54	HEATSINK RH-MINIPOD	1
76-59-2	NUT-KEPS 4-40	2
60-22-2	MAGNET-CHANNEL	1
44-33-2	WINDOW-RED FILTER 2.4 XF POD	2
162-91-2	TAPE-FOAM .O3 THICK	2
24-137-2	NAMEPLATE-2.4 XF	1
24-51-2	NAMEPLATE, HUNTER MODEL & PART	1
128-1160-2	DECAL, XF2 HIPWR APPROVAL	1

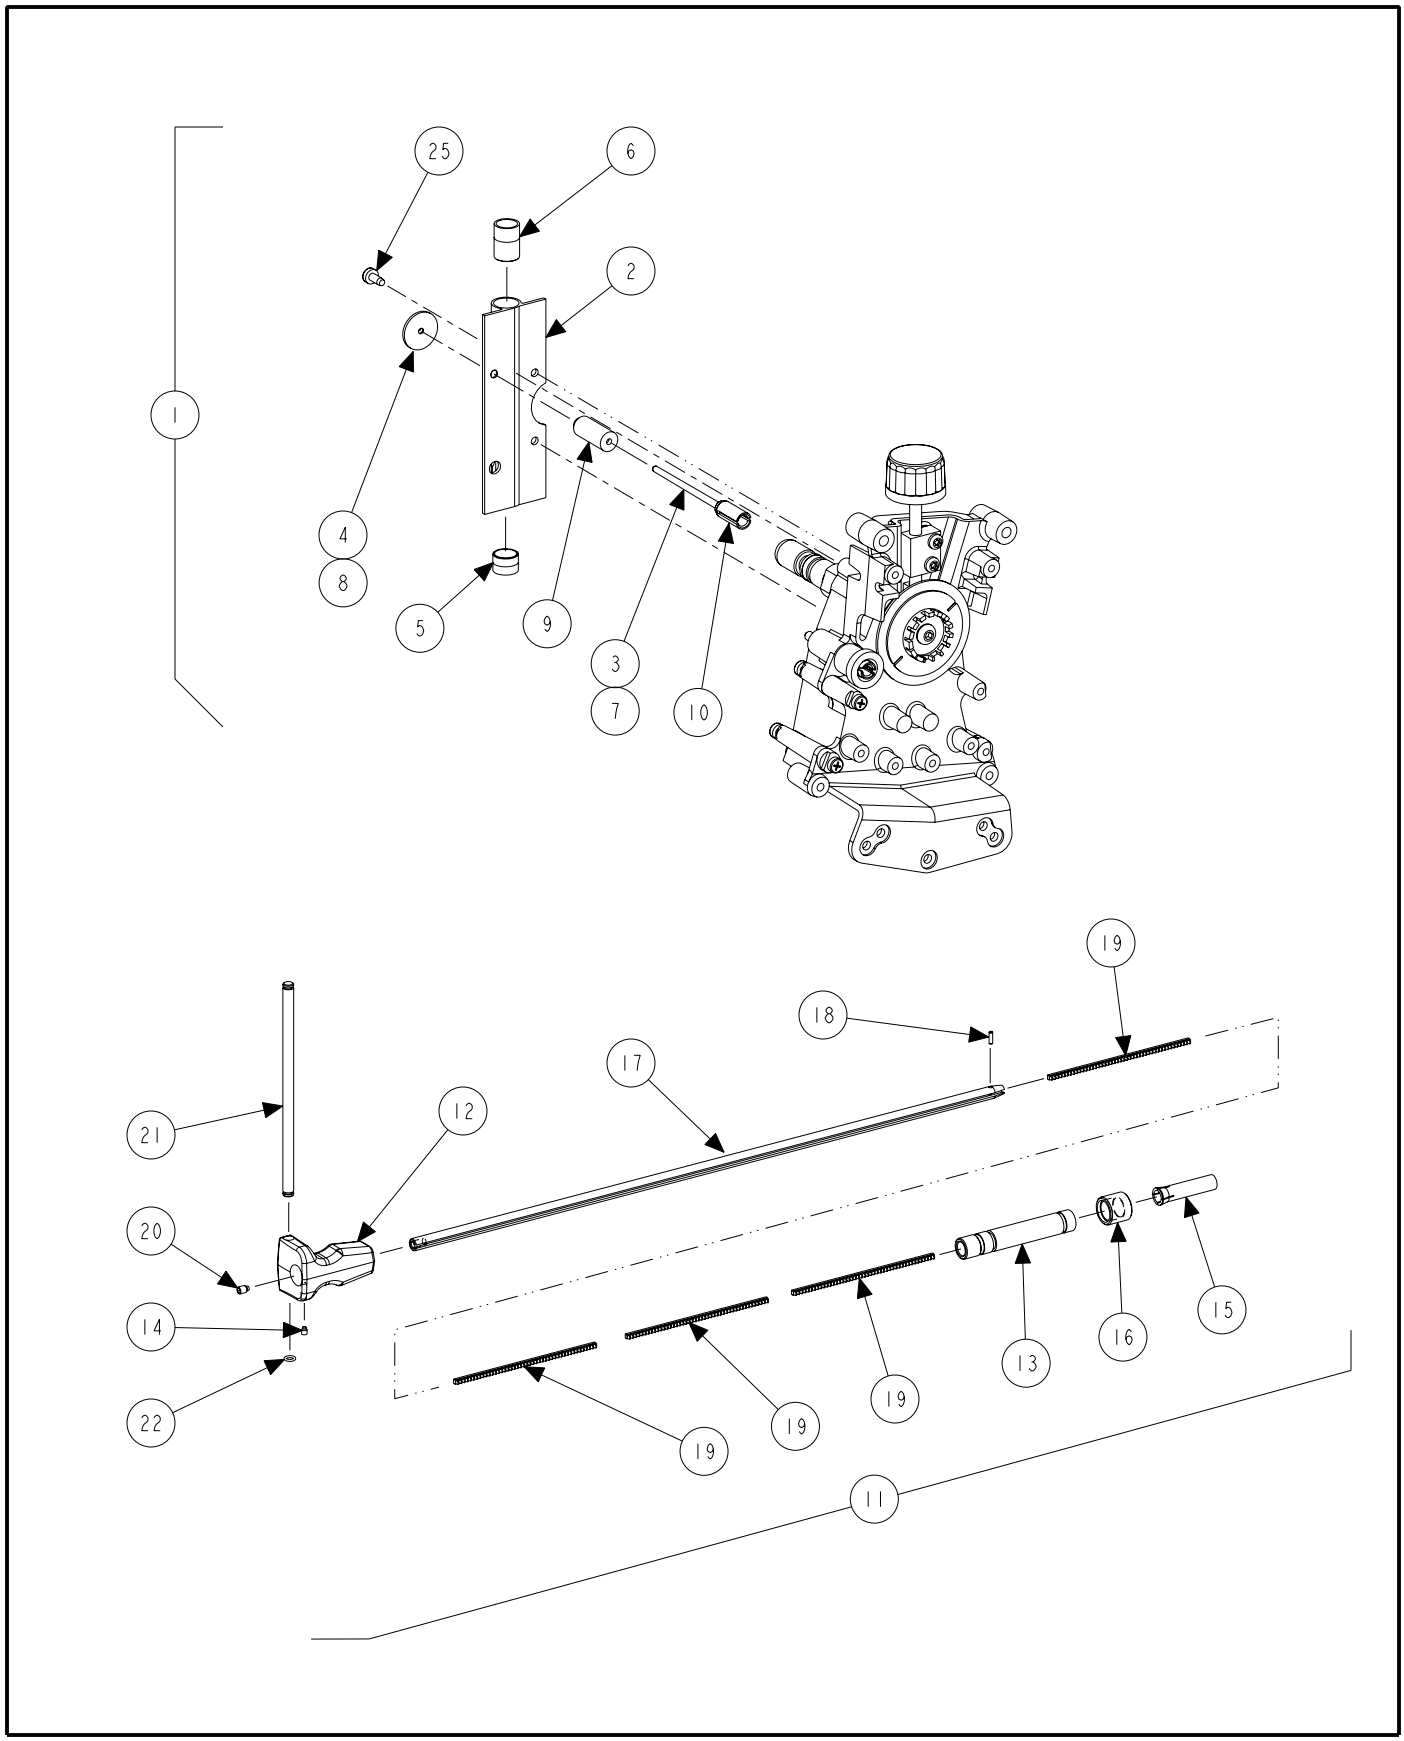

DSP506/508 SENSOR ASSEMBLY

REFER TO NEXT SHEET FOR PARTS DESCRIPTION LISTING

PARTS DESCRIPTION LISTING

Index No.	Part Number	Description	Qty.
1	109-107-1	TRANSDUCER ASSEMBLY-DSP500 RIDE HEIGHT-LF/RR (Consisting Of:)	2
OR	109-108-1	TRANSDUCER ASSEMBLY-DSP500 RIDE HEIGHT-RF/LR (Consisting Of:)	2
2	11-1084-2	SUPPORT-RIDE HEIGHT DSP500 LF/RR	1
OR	11-1100-2	SUPPORT-RIDE HEIGHT DSP500 RF/LR	1
3	97-476-2	SHAFT-RIDE HEIGHT, DSP500	1
4	99-130-2	GEAR-RIDE HEIGHT DSP500	1
5	113-203-2	BUSHING-RIDE HEIGHT, SHORT	1
6	113-204-2	BUSHING-RIDE HEIGHT, LONG	1
7	124-147-2	SEAL-O RING, 1/8 ID X 5/16 OD	2
8	75-190-2	SSS 4-40X.13 CUP PT BO	2
9	130-176-2	BEARING-RIDE HEIGHT	1
10	223-48-2	RING-COMPRESSION	1
11	221-669-1	KIT, TOOL RIDE HEIGHT, DSP500 (Consisting Of:)	1
12	34-175	KNOB-RIDE HEIGHT PAINTED	1
13	106-137-2	SLEEVE-RIDE HEIGHT	1
14	75-182-2	SSS 10-32X1/4 HALF DOG PT	1
15	113-240-2	BUSHING-RH TOOL	1
16	34-174-2	KNOB-RH TOOL	1
17	63-231-2	ROD-RACK GUIDE, RIDE HEIGHT	1
18	135-173-2	PIN-SPLITROLL 1/8 X 7/16	1
19	99-102-2	GEAR-RACK, RIDE HEIGHT	4
20	75-320-2	SSS 1/4-20X3/8 HALF DOG PT	1
21	63-232-2	ROD-TOOL RIDE HEIGHT (10")	1
22	124-109-2	SEAL-O RING .25 ID X .38 OD	2
23	162-47-2	ADHESIVE-THREAD LOCKING (Not Illustrated)	A/R
24	181-33-2	ELOP-EN DSP100 SENSORS (Not Illustrated)	4
25	75-326-2	SCREW-STAP 8-32X5/16 PH PR BZ	8